



USER MANUAL



Inverter/charger

HP3522-AH1250P20BR

HP3542-AH0650P20BR

HP5542-AH1050P20BR

Table of Contents

Important Safety Instructions	1
Disclaimers	6
1 General Information	7
1.1 Overview	7
1.2 Appearance	9
1.3 Naming rules	12
1.4 Connection diagram	12
2 Interface	14
2.1 Indicator	14
2.2 Button	15
2.3 Home screen	16
2.4 Interface	17
2.4.1 Real-time data interface	17
2.4.2 User interface	18
2.4.3 Administrator interface	20
2.5 Parameters setting	21
2.5.1 Parameters list	21
2.5.2 Battery work modes	37
2.5.3 Battery voltage control parameters (Smart)	45
2.5.4 Battery voltage control parameters (Expert)	45

2.5.5 Time setting	50
2.5.6 Password modifying	50
3 Single Installation	51
3.1 Attention	51
3.2 Wire and circuit breaker size	52
3.3 Mounting the inverter/charger	54
3.4 Wiring the inverter/charger	55
3.4.1 Grounding	57
3.4.2 Connect the battery	58
3.4.3 Connect the AC load	59
3.4.4 Connect the PV modules	60
3.4.5 Connect the utility or generator	61
3.4.6 Connect the communication module	62
3.5 Operate the inverter/charger	63
4 Working Modes	65
4.1 Abbreviation	65
4.2 Battery mode	66
4.2.1 Scenario A: Both PV and utility are not available.	66
4.2.2 Scenario B: PV is available, but the utility is not available.	67
4.2.3 Scenario C: Both PV and Utility are available.	68
4.2.4 Scenario D: The PV is not available, but the Utility is available.	71

4.3 No-battery mode	73
5 Protections	75
6 Troubleshooting	79
6.1 Battery faults	79
6.2 PV faults	80
6.3 Inverter faults	82
6.4 Utility faults	84
6.5 Load faults	85
6.6 Other faults for single inverter/charger	85
6.7 BMS faults	87
7 Maintenance	88
8 Technical Specifications	89
9 Dimensions	94

Important Safety Instructions

Please keep this manual for future reference.

This manual contains all the safety, installation, and operation instructions for the HP-AHP20BR series inverter/charger (hereinafter referred to as "the inverter/charger").

1. Explanation of symbols

To ensure the user's personal and property safety while using this product, relevant information is provided in the manual and highlighted with the following symbols.

Please read the relevant texts carefully when you encounter the following symbols in the manual.



DANGER

Indicates a high-level hazard that, if not avoided, will result in serious injury or death.



WARNING

Indicates a medium-level hazard that, if not avoided, could result in death or serious injury.



CAUTION

Indicates a low-level hazard that, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates an important reminder during the operation which, if ignored, may result in an equipment error alarm.

Tip

Indicates recommendation for reference.



Read through the user manual before any operations.

2. Requirements for professional and technical personnel

- Professionally trained.
- Familiar with related safety specifications for the electrical system.
- Read this manual carefully and master the related safety precautions.

3. Operations for professional and technical personnel

- Install the inverter/charger to a specified location.
- Conduct trial operations for the inverter/charger.
- Operate and maintain the inverter/charger.

4. Safety precautions before installation



DANGER

- Keep the inverter/charger out of the reach of children.
- When installing the inverter/charger, end-users must evaluate whether the operation area exists arc danger.

NOTICE

- When receiving the inverter/charger, please check if there is any damage in transportation. If you find any problem, please contact the transportation company or us in time.
- When installing or moving the inverter/charger, follow the instructions in this manual.

5. Safety precautions for mechanical installation



DANGER

Before installation, confirm the inverter/charger has no electrical connection.

NOTICE

Ensure enough heat dissipation space for the inverter/charger before installation. Do not install the inverter/charger in humid, salt spray, corrosion, greasy, flammable, explosive, dust accumulative, or other harsh environments.

6. Safety precautions for electrical connection



DANGER

- Do not put the inverter/charger close to the flooded lead-acid battery because the sparkle in the terminals may ignite the hydrogen released by the battery.
- Both the utility input and AC output are of high voltage, do not touch the wiring to avoid electric shock.
- When the AC output terminal connects to the load, the inverter/charger needs to stop working.



WARNING

Ensure all wirings are secure to prevent overheating due to loose connections.

NOTICE

- The inverter/charger shell should be connected to the ground, and the cross-sectional area of the wire connecting the ground terminal to the earth should not be less than 4mm².
- A fast-acting fuse or breaker should be used between the battery and inverter/charger; whose rated current should be twice of the inverter/charger rated input current.
- Do not connect the AC output terminal to other power sources or utility. Otherwise, the inverter/charger will be damaged.
- It is strictly forbidden to connect a transformer or a load with a surge power (VA) exceeding the overload power at the AC output port. Otherwise, the damage will be caused to the inverter/charger.

7. Safety precautions for inverter/charger operation



WARNING

- The inverter/charger generates much heat during operation with a high cabinet temperature. Do not touch the unit and keep it far away from the materials and devices that are sensitive to high temperature.
- When the inverter/charger is working, do not open the inverter/charger shell for any operation.
- When eliminating the fault that affects the safety performance of the inverter/charger or disconnecting the DC input, turn off the inverter/charger switch and operate it after the LCD is completely OFF.

8. Dangerous operations causing an electric arc, fire, or explosion

- Touch the uninsulated ends of potentially live cables.
- Touch the live wiring copper busbars, terminals, or internal components of the device.
- Loose connection of power cables.
- Accidental dropping of screws or other components inside the inverter/charger.
- Improper operations by untrained non-professional or technical personnel.

DANGER

Once an accident occurs, it must be handled by professionals. Improper operation would cause a more serious accident.

9. Safety precautions for stopping the inverter/charger

- Turn off the AC output and disconnect the utility input breakers. Then, turn off the DC switch.
- After the input and output wires are disconnected for ten minutes, the internal conductive modules can be touched.
- The inverter/charger does not contain repair parts internally. If any maintenance service is required, please get in touch with our after-sales service personnel.

CAUTION

Do not touch or open the shell after the inverter/charger is powered off within ten minutes.

10. Safety precautions for inverter/charger maintenance

- It is recommended to check the inverter/charger with testing equipment to ensure there is no voltage or current on the terminals and cables.
- When conducting the electrical connection and maintenance, post a temporary warning sign or put up barriers to prevent unrelated personnel from entering the electrical connection or maintenance area.
- Improper maintenance of the inverter/charger may cause personal injury or equipment damage.
- It is recommended to wear an antistatic wrist strap or avoid unnecessary contact with the circuit board.

CAUTION

The safety mark, warning label and rating plate on the inverter/charger should be clearly visible, not removed or covered.

11. Working temperature

- Working temperature range: -20℃ to +50℃ (when the working temperature exceeds 30℃, the charging power and load power will be reduced appropriately.)
- Storage temperature range: -25℃ to +60℃ (No sharp temperature changing)
- Relative humidity: < 95% (Non-condensing)
- Altitude: < 4,000 meters (If the altitude exceeds 2,000 meters, the actual output power is reduced appropriately.)

NOTICE

The inverter/charger is strictly prohibited from being used in the following places. EPEVER shall not assume any liability for damages caused by its use in inappropriate locations:

- Do not install the inverter/charger in humid, salt spray, corrosion, greasy, flammable, explosive, dust accumulative, or other harsh environments. When installing it outdoors, avoid direct sunlight and rainwater infiltration.
- Do not install the inverter/charger and lead-acid liquid batteries in the same cabinet, to prevent the acidic gas generated during the operation of the battery corroding the inverter/charger.

Disclaimers

The warranty does not apply to the following conditions:

- Damage caused by improper use or inappropriate environment (such as the humid, salt spray, corrosion, greasy, flammable, explosive, dust accumulative, or other severe environments).
- The actual current/voltage/power exceeds the limit value of the inverter/charger.
- Damage caused by working temperature exceeding the rated range.
- Arc, fire, explosion, and other accidents caused by failure to follow the inverter/charger stickers or manual instructions.
- Unauthorized dismantling or attempted repair.
- Damage caused by force majeure.
- Damage occurred during transportation or handling.

1 General Information

1.1 Overview

The HP-AHP20BR series supports charging from utility power, generators, and solar panels, as well as offers utility bypass power supply, AC independent inverter output, and energy management capabilities. Additionally, it supports parallel operation for multiple units (12 units in standard application, more than 12 units need to be customized) in single phase and three phase, with 220VAC single phase or 380VAC three phase AC output.

The DSP chip in the product with an advanced control algorithm brings high response speed and conversion efficiency. In addition, this product adopts an industrial design to ensure high reliability and features multiple charging and output modes.

The product adopts the Three-stage charging method (Bulk Charging, Constant Charging, and Float Charging) to ensure battery safety. The large lattice LCD screen shows the operational status and full parameters. Besides, the communication interface with the standard Modbus protocol allows end-users to expand their applications and is suitable for different monitoring requirements.

The new optimized MPPT tracking technology can fast-track the PV array's maximum power point in any sunlight conditions and obtain the maximum energy in real time. Two PV input (connect separately or connect in parallel) is supported, which improves the PV utilization.

The AC to DC charging process adopts the advanced control algorithm brings the full digital PFC and dual closed-loop voltage-current control. It enables the input power factor close to 1 and improves the control accuracy. The fully smart digital DC to AC inverting process adopts the advanced SPWM technology, outputs a pure sine wave, and converts the DC power to AC power. It is suitable for household appliances, power tools, industrial equipment, audio systems, and other electronics.

This inverter series has AFCI function. The AFCI function has two states: ON and OFF, and the factory default setting is OFF. Users can turn on and off the AFCI function through the LCD (basic settings). After turning it on, when a DC series arc occurs at the PV end, the AFCI function can quickly shut down the inverter output to prevent the arc from causing fire and other hazards.

End-users can choose energy sources according to actual needs to maximize solar energy utilization and flexibly take the Utility as a supplement in the hybrid system. This inverter/charger provides high-quality, high-stability, and high-reliability electric energy to the end-users by improving the solar system's power supply efficiency.


Features

- Full intelligent digital energy storage equipment
- Support battery mode or non-battery mode

- Non-battery mode: simultaneously charging with solar (Main) and Utility (Assist)
- Advanced SPWM technology and pure sine wave output
- Parallel operation in single phase or three phase for 12 units in standard application⁽¹⁾
- PFC technology improves power factor, reduces reactive power and reduces the demand on the power grid capacity
- Advanced MPPT technology, with maximum tracking efficiency higher than 99.5%
- Some models support two PV inputs to improve PV utilization⁽²⁾
- Support charging from multiple types of generators⁽³⁾
- Battery voltage controls the output dry contact of the controller to turn on/off the diesel engine and other external equipment
- Battery charging or discharging current limit to compatible with different types of batteries
- Maximum utility charging current settings to flexibly configure utility charging power
- With the function of historical data recording⁽⁴⁾, up to 25,000, the interval of 15 minutes can be recorded for half a year (the interval time of 1s to 3,600s configurable)
- Multiple LED indicators show system status in real-time
- One-button control of AC output
- Large size LCD display for better status monitoring
- RS485 communication port with optional WiFi, TCP, or 4G modules for remote monitoring
- Three-stage charging method to ensure battery safety
- Lithium battery communication port to perform the safe charging and discharging
- Comprehensive electronic protection
- The PV input terminal of the inverter has AFCI function, which can be set ON and OFF via the LCD
- -20°C to +50°C operating temperature range to meets more environment requirements

(1) More than 12 units need to be customized.


(2) Only the HP5542-AH1050P20BR supports the PV input function, which realizes single MPPT tracking or two parallel MPPTs tracking. When two PV arrays are independently input, set the "PV mode" as "ALL SINGLE." When two PV arrays connected in parallel to one access to the inverter/charger, set the "PV mode" as "Parallel". The wiring diagram of PV and the inverter/charger is as below. When there is only one PV array, the "PV mode" will be "ALL SINGLE" by default, and "Other PV modes" will be invalid.

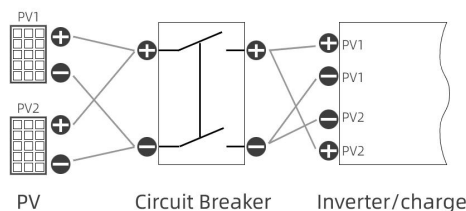


- (3) When connecting a non-inverter generator, the charging current maybe cannot reach the rated power. It is recommended to connect an inverter generator. When using the generator, the “AC Input mode” needs to be set to the “Generator”. For specific setting, refer to Subsection [2.5.1 Parameters list](#). To reduce the occurrence of overvoltage protection due to distortion of the generator's voltage waveform, it is recommended that the generator's power be at least 1.5 times greater than the rated power of the integrated unit.
- (4) The contents of each historical record include: Year, Month, Day, Hour, Minutes, Seconds, Maximum PV Voltage (V), PV Power (W), Utility Voltage (V), Utility Current (A), Utility Frequency (Hz), Utility Power (W), Load Voltage (V), Load Current (A), Load Power (W), Inverter Frequency (Hz), Battery Voltage (V), Battery Current (A), Battery SOC (%), Battery Temperature (°C), PV Module Temperature (°C), Transformer Temperature (°C), Maximum BAT Volt (V), Minimum BAT Volt (V).

1.2 Appearance

- HP3522-AH1250P20BR, HP3542-AH0650P20BR

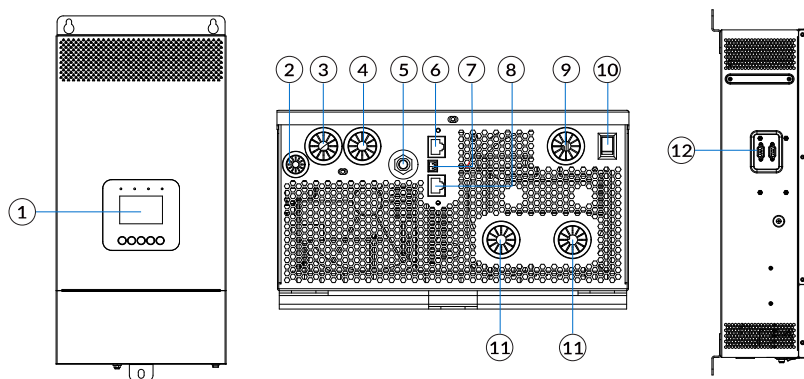


● HP5542-AH1050P20BR

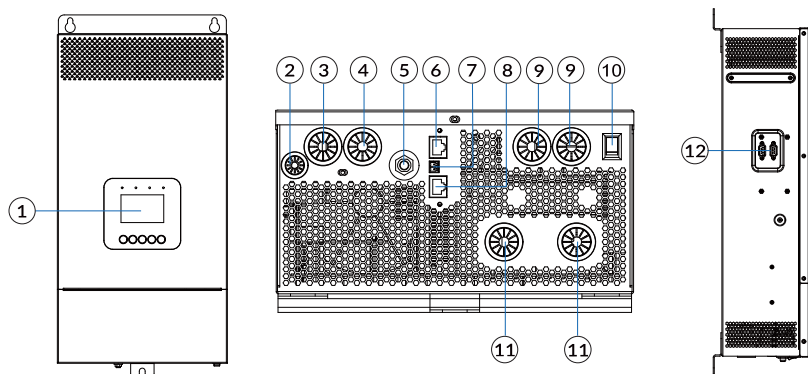

No.	Instruction	No.	Instruction
1	LCD (see Chapter 2)	7	Dry contact interface ⁽²⁾
2	Grounding terminal	8	RS485 port (RJ45, with isolation design) ⁽³⁾ 5VDC/200mA
3	AC input port	9	PV terminals
4	AC output port	10	Power switch
5	Utility overcurrent protector	11	Battery terminals
6	BMS port (RJ45, with isolation design) ⁽¹⁾	12	Parallel connection interface ⁽⁴⁾

 (1) The inverter/charger integrates BMS-Link module, different lithium battery manufacturers' BMS protocols can be converted into our standard BMS protocol. In addition, it realizes the communication between the inverter/charger and the BMS. Pin definition for the BMS port (RJ45):




Pin	Definition	Pin	Definition
1	+5VDC	5	RS485-A

2	+5VDC	6	RS485-A
3	RS485-B	7	GND
4	RS485-B	8	GND

Tip	Please go to EPEVER official website to check or download the currently supported BMS manufacturers and the BMS parameters.
------------	---


- (2) Dry contact capacity: 1A@125VAC. The dry contact interface is connected with the generator switch to turn on/off the generator.
- (3) Connecting with the RS485 port, an optional WiFi, TCP, or 4G module can remote control the inverter/charger. Pin definition for the RS485 port is the same as the BMS port, see description in above paragraph (1).
- (4) Pin definition for the parallel connection interface:

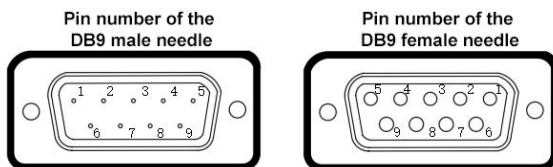

Pin	Definition	Pin	Definition
1	HFS-BUS	4	CAN-L
2	PFS-BUS	5	CAN-H
3	PS-GND	6/7/8/9	Reserved


1.3 Naming rules

HP 35 4 2 - AH 06 50 P20 BR

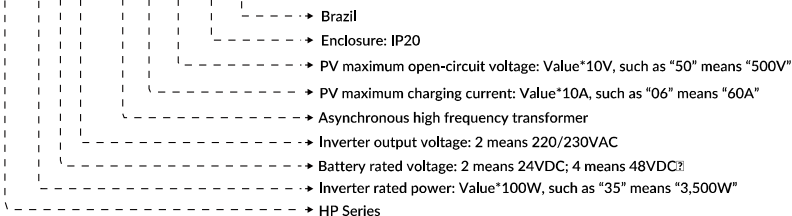


1.4 Connection diagram

- No battery mode

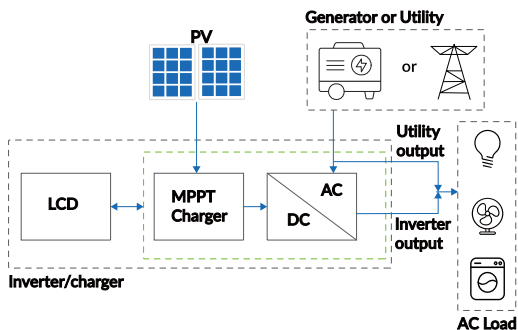


- Battery mode

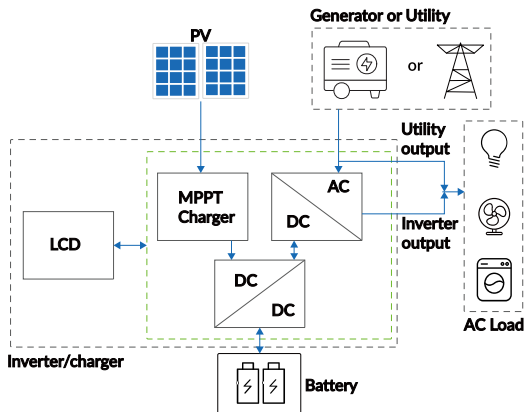

NOTICE

- AC loads shall be determined according to the output power of the inverter/charger. The load exceeding the maximum output power may damage the inverter/charger.
- For different battery types, confirm the relevant parameters before power on.
- There are many types of oil generators with complex output conditions, which must be tested before use. It is necessary to undergo on-site no-load trial operation testing to confirm that the voltage and frequency fluctuations are within the allowable range of the equipment before use.

2 Interface

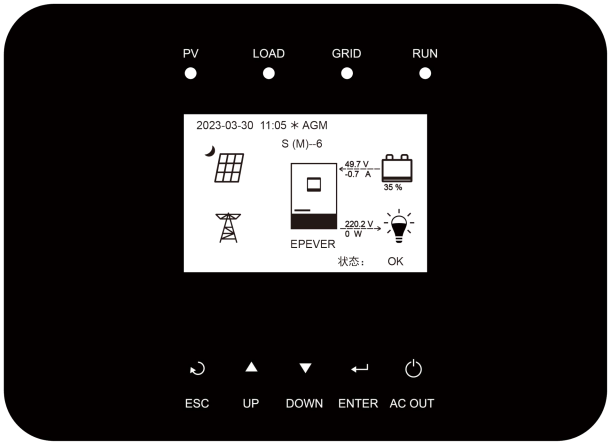

Tip The display screen can be viewed clearly when the angle between the end-user's horizontal sight and the display screen is within 90°. If the angle exceeds 90°, the information on the display screen cannot be viewed clearly.

2.1 Indicator


Indicator	Status	Instruction
PV	OFF	No PV input
	Green ON	PV normal
	Red ON	PV charging fault (PV1/PV2 overvoltage)
LOAD	OFF	No inverter output
	Green ON	Inverter, charging, and bypass are normal
	Red ON	Inverter fault (inverter overcurrent/overvoltage/undervoltage, output short-circuit, and overload)
GRID	OFF	No utility input

	Green ON	Utility normal
	Flashing Green (1Hz)	Oil generator charging
	Red ON	Utility charging fault (Utility overvoltage/overcurrent/undervoltage/frequency abnormal)
RUN	Flashing Green (1Hz)	Normal communication
	Flashing Red (1Hz)	Communication fault

2.2 Button

Button	Operation	Instruction
	Click	- Exit the current interface. - Switch from the "Home Screen" to the "Main Table Data Information" screen.
	Click	- Browse interface: Up/Down. - Parameters setting interface: Increase or decrease the parameter value per step size.
	Press and hold	Parameters setting interface: Increase or decrease the parameter value per 10 times the step size.
	Click	- Click on the Home screen to enter the real-time data screen. - Click on the parameter browse interface to enter the parameters setting screen. - Confirm the setting parameters.
	Press and hold	Press and hold on the home screen to enter the password interface. After verifying the password, enter the parameter browse interface.
	Click	Click on the time or password setting interface to move the cursor left.
	Press and hold	Press and hold on the home screen to turn on/off the inverter output, the utility charging, or the utility bypass.

2.3 Home screen

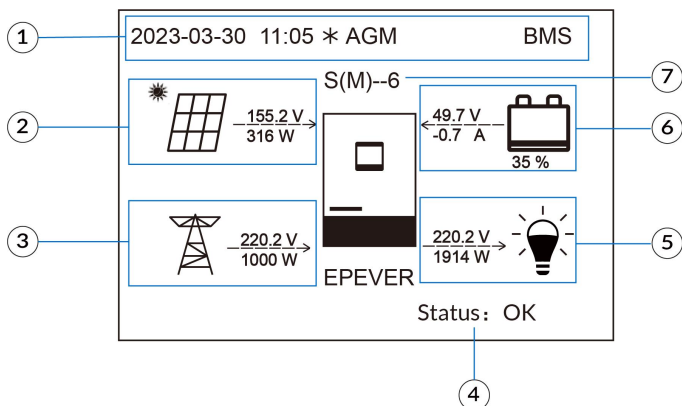

No.	Instruction
1	Display the system time, current battery type, and charging stage. When the BMS communication is normal, the icon BMS will be shown on the far right, while when it is abnormal, the icon BMS will be shown on the same position.
2	PV icon:  PV connection is normal.  No PV connection (or at night). Actual PV voltage/total PV power
3	Utility icon:  Utility connection is normal.  No utility connection. Utility input voltage/Utility input power
4	Status: When there are no faults, it displays "OK." When faults occur, it displays the minimum fault code. Note: On the home screen, click the "UP/DOWN" button to select the "Status" bar, and click the "ENTER" button to check the detailed fault.
5	Load icon:  AC output is normal.  No AC output. AC output voltage/AC output power

6	Battery status: ◀----- The battery is discharging. -----▶ The battery is being charged. Battery voltage battery current/lithium battery real-time SOC (display BMS SOC when there is BMS and display DSP SOC when there is no BMS)
7	Parallel status icon. It shows when there is two or more inverter/chargers connecting in parallel successfully, and it will not display on the single inverter/charger.

Note: When the PV array charges the battery, the equalizing charging is performed on the 28th of each month by default (the date can be modified).

- Parallel status icon naming rule:

S (M) - 6


| | | - - - - - ▶ Number of parallel devices
 | | - - - - - ▶ M: Master device; S: Slave device
 | - - - - - ▶ Phase: S (Single phase); A (A phase); B (B phase); C (C phase)

Note: The master and slave units are randomly defined.

2.4 Interface

2.4.1 Real-time data interface


After powering on the inverter/charger, the home screen shows up. Click the "ENTER" button to enter the real-time data screen. Click the "ENTER" button to enter the next real-time screen, click the "UP/DOWN" button to browse all parameters on current screen, or click the "ESC" button to return the home screen.

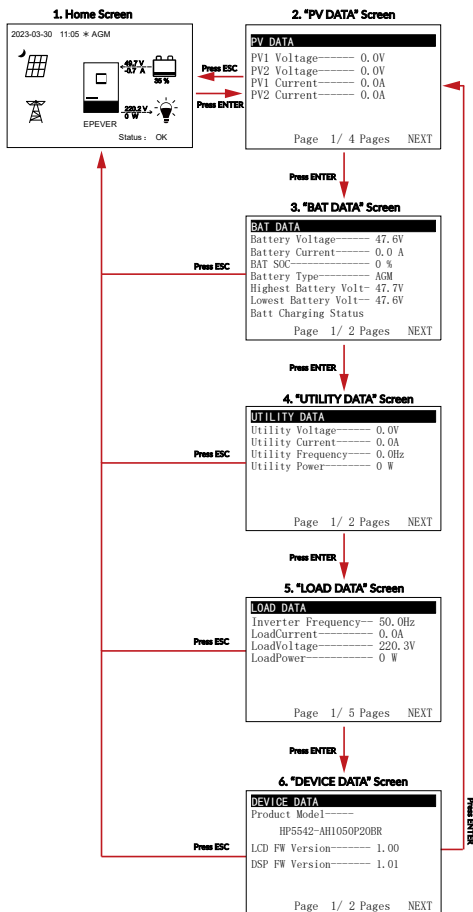

Note: For LCD FW Version and DSP FW Version, please refer to the real display interface.

2.4.2 User interface

After powering on the inverter/charger, the home screen shows up. Click the "ESC" button to enter the "Main Table Data Information" screen. Click the "ENTER" button to enter the next screen, or click the "UP/DOWN" button to browse the current screen display.

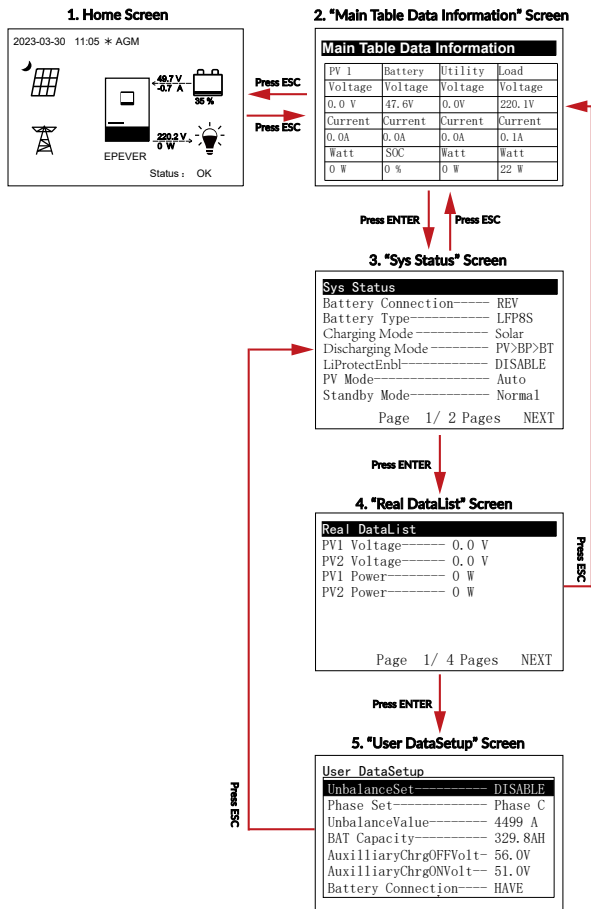


➤ "User DataSet" interface

The end-users can modify common parameters on the "User DataSet" interface without inputting the password. The default parameters and setting range refer to Subsection [2.5.1 Parameters list](#).

2.4.3 Administrator interface

After powering on the inverter/charger, the home page shows up. Press and hold the “ENTER” button to enter the password interface. Input the password correctly (0000 by default) to check all parameters or modify them.

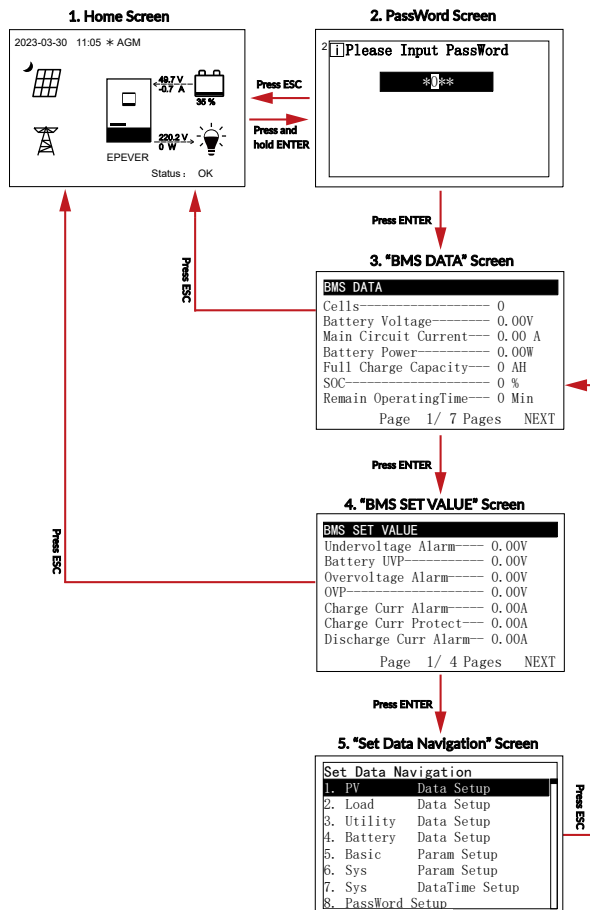

2.5 Parameters setting

2.5.1 Parameters list

Set Data Navigation	
1. PV	Data Setup
2. Load	Data Setup
3. Utility	Data Setup
4. Battery	Data Setup
5. Basic	Param Setup
6. Sys	Param Setup
7. Sys	DataTime Setup
8. PassWord	Setup

Enter the "Set Data Navigation" screen according to Subsection [2.4.3 Administrator interface](#). Then click the "UP/DOWN" button to select navigations 1 to 9 for detail settings. Default parameters and setting ranges are shown in the following table.

Note: On the parameter setting interface, click the "UP/DOWN" button to increase/decrease the parameter value by one step size (step size is the minimum unit to modify the parameter). Press and hold the "UP/DOWN" button to increase/decrease the parameter value by ten times the step size (Except for "Battery Capacity" and "Log Data Interval", these values will be increased/decreased by 100 times the step size). Press the "ENTER" button to confirm.

Parameters	Default	User define
1. PV Data Setup		
PV UVP (PV Undervoltage Protection)	80.0V	User define: 80.0V to (PV Undervoltage Recover Voltage minus 5V), step size: 0.1V
PV UV Recovery (PV Undervoltage Recovery)	100.0V	User define: 100.0V to 200.0V, or (PV Undervoltage Protect Voltage plus 5V) to 200.0V, step size: 0.1V Note: Take the maximum value between 100.0V and (PV Undervoltage Protect Voltage plus 5V).
2. Load Data Setup		
Inverter Voltage (Inverter Output	220V	User define: 220V, 230V

Voltage)		
Inverter Output Frequency (Inverter Frequency)	50Hz	User define: 50Hz, 60Hz Note: When the Utility power is connected and the Utility frequency is detected, the output frequency will be in accordance with the Utility frequency in the Utility bypass mode. For single inverter/charger, it will take effect immediately after the output frequency is changed. For the parallel connection, you must shut down the inverter/charger for 10s and then restart it for the modification to take effect (Enter into the Load Data Setup page again to check if the change has been changed).
UnbalanceSet (Current Unbalance Set)	DISABLE	User define: DISABLE, ENABLE Note: The parameter will only take effect when used in three phase. After restoring to factory settings, the default value is the last modified value.
Phase Set	Single	User define: Single Phase, Phase A, Phase B, Phase C Note: After phase set is changed, must turn off the inverter charger for 10 seconds before restarting. Enter into the Load Data Setup page again to check if the change has taken effect. After restoring to factory settings, the default value is the last modified value.
UnbalanceValue (Current unbalance value)	5A	User define: 0A to 6,000A, step size 1A Note: The parameter will only take effect when used in three phase. When "UnbalanSet" is enabled, if current unbalance value between any two phases is higher than set value, the load output will be turned off automatically. After restoring to factory settings, the default value is the last modified value.
3. Utility Data Setup		
OVD (Utility Overvoltage Disconnect Voltage)	265.0V	User define: (Utility Overvoltage Reconnect Voltage plus 10V) to 285.0V, step size: 0.1V

OV Reconnect Volt (Utility Overvoltage Reconnect Voltage)	255.0V	User define: 220.0V to (Utility Overvoltage Disconnect Voltage minus 10V), step size: 0.1V
UV Disconnect Volt (Utility Undervoltage Disconnect Voltage)	175.0V	User define: 90.0V to (Utility Undervoltage Recovery Voltage minus 10V), step size: 0.1V
UV Recovery Volt (Utility Undervoltage Recovery Voltage)	185.0V	User define: (Utility Undervoltage Disconnect Voltage plus 10V) to 220.0V, step size: 0.1V
OF Disconnect Freq (Utility Overfrequency Disconnect Frequency)	70.0Hz	In the bypass state, when the actual utility input frequency is higher than this value, the inverter/charger will be switched to the inverter output state. User define: 52.0Hz to 70.0Hz, or (Utility Underfrequency Disconnect Frequency plus 0.5Hz) to 70.0Hz, step size: 0.1Hz. Note: Take the maximum value between 52.0Hz and (Utility underfrequency disconnect plus 0.5Hz).
UF Disconnect Freq (Utility Underfrequency Disconnect Frequency)	40.0Hz	In the bypass state, when the actual utility input frequency is lower than this value, the inverter/charger will be switched to the inverter output state. User define: 40.0Hz to 58.0Hz, or 40.0Hz to (Utility Overfrequency Disconnect Frequency minus 0.5Hz), step size: 0.1Hz. Note: Take the minimum value between 58.0Hz and (Utility over-frequency disconnect minus 0.5Hz).
Max Charging Current (Utility Maximum Charging Current)	60.0A	User define: 5.0A to 60.0A for HP3542-AH0650P20BR, step size: 0.1A Namely, the maximum current at the battery end when the utility charges the battery.
	100.0A	User define: 5.0A to 100.0A for HP5542-AH1050P20BR, step size: 0.1A Namely, the maximum current at the battery end

		when the utility charges the battery.
	110.0A	User define: 5.0A to 110.0A for HP3522-AH1250P20BR, step size: 0.1A Namely, the maximum current at the battery end when the utility charges the battery.

4. Battery Data Setup

BAT Set Mode (Battery set mode)	Smart	User define: Smart (Refer to Subsection 2.5.3), Expert (Refer to Subsection 2.5.4)
BAT Capacity (Battery capacity)	100.0AH	User define: 10.0AH to 1200.0AH, step size: 0.1AH Note: When setting the BAT Capacity, press and hold the "UP/DOWN" button to increase/decrease the value by 100*step size, namely, 10AH.
Equalization Charge Time (Battery Equalization Charging Time)	120 Min	User define: 10 minutes to 180 minutes, step size: 1 minute
Bulk Charging Time (Battery Bulk Charging Time)	120 Min	User define: 10 minutes to 180 minutes, step size: 1 minute
Battery TCC (Battery Temperature Compensation Coefficient)	mV/°C/2V	User define: 0 to 9, step size: 1 Note: This option is reserved, which is invalid currently.
AuxiliaryChrgOFFVolt (Auxiliary Charging OFF Voltage)	56.0V (48V system)	Under certain working modes, the utility will stop charging the battery if the battery voltage exceeds this value.
	28.0V (24V system)	User define: (Auxiliary Charge ON plus $(0.2 \times N)$) $\leq$ Auxiliary Charge OFF $\leq$ Charging limit voltage ($N = \text{Rated battery voltage}/12$). According to the battery type, the step size is 0.1V.
AuxiliaryChrgONVolt (Auxiliary Charging ON Voltage)	51.0V (48V system)	Under certain working modes, the utility will charge the battery if the battery voltage is lower than this value.
	25.5V	User define: Low voltage disconnect voltage $\leq$

	(24V system)	Auxiliary Charge ON $\leq$ (Auxiliary Charge OFF minus $(0.2 \times N)$) Note: N = Rated battery voltage/12. According to the battery type, the step size is 0.1V.
MaxChargingCurrent (Battery Maximum Charging Current)	60.0A	User define: 5.0A to 60.0A for HP3542-AH0650P20BR, step size: 0.1A Namely, the maximum allowable charge current on the battery side.
	100.0A	User define: 5.0A to 100.0A for HP5542-AH1050P20BR, step size: 0.1A Namely, the maximum allowable charge current on the battery side.
	120.0A	User define: 5.0A to 120.0A for HP3522-AH1250P20BR, step size: 0.1A Namely, the maximum allowable charge current on the battery side.
LimitDisChgCurrt (Battery Limit Discharging Current)	175.0A	User define: 10.0A to 175.0A for HP3542-AH0650P20BR, step size: 0.1A Namely, the maximum allowable discharge current on the battery side.
	250.0A	User define: 10.0A to 250.0A for HP5542-AH1050P20BR, step size: 0.1A Namely, the maximum allowable discharge current on the battery side.
	380.0A	User define: 10.0A to 380.0A for HP3522-AH1250P20BR, step size: 0.1A Namely, the maximum allowable discharge current on the battery side.
BMS COM Status (BMS Communication Status)	164	Read-only, 164 indicates abnormal BMS communication; 165 indicates normal BMS communication.
Charge&Discharge Mode (Battery Charge and Discharge Control Mode)	VOLT (Voltage)	User define: VOLT, SOC VOLT: The battery parameters take effect after setting this value as "VOLT."


		SOC: The SOC parameters take effect after setting this value as "SOC". Note: If "SOC" is selected, the battery needs to go through several full charge and discharge cycles, and the battery capacity must be set correctly.
BMS InvalidAction	DSP Auto	User define: DSP Auto, NoAction DSP Auto: The inverter/charger works according to the default mode and parameters. NoAction: No charging and discharging, equivalent to standby mode.
FullChargeProtection (Full Charge Protection SOC)	100%	It takes effect after the "Charge&Discharge Mode" is set as "SOC". When the battery SOC is higher than or equals to this value, the inverter/charger will stop charging the battery. User define: (Full Charge Protection Recovery SOC plus 5%) to 100%, or 80% to 100%, step size: 1% Note: Take the maximum value between (Full Charge Protection Recovery SOC plus 5%) and 80%.
Full Charge Recovery (Full Charge Protection Recovery SOC)	95%	It takes effect after the "Charge&Discharge Mode" is set as "SOC". When the battery SOC is lower than this value, the inverter/charger will charge the battery. User define: 60% to (Full Charge Protection SOC minus 5%), step size: 1%
LowBattAlarmRecovery (Low Battery Alarm Recovery SOC)	40%	It cannot be set separately (equals the "Discharging Recovery"). It takes effect after the "Charge&Discharge Mode" is set as "SOC".
Low Battery Alarm (Low Battery Alarm SOC)	25%	It takes effect after the "Charge&Discharge Mode" is set as "SOC". User define: 10% to 35% or (Discharging Protection SOC plus 5%) to (Discharging Recovery minus 5%), step size: 1%. Note: Take the minimum value between (Low energy disconnect recover SOC minus 5%) and

		35%.
Discharging Recovery (Discharging Protection Recovery SOC)	40%	It takes effect after the "Charge&Discharge Mode" is set as "SOC". User define: (Low Battery Alarm SOC plus 5%) to 60%, or 20% to 60%, step size: 1% Note: Take the maximum value between (Low Battery Alarm SOC plus 5%) and 20%.
Discharge Protection (Discharging Protection SOC)	10%	It takes effect after the "ChargeControlMode" is set as "SOC." When the battery SOC is lower than this value, the battery will stop discharging. User define: 0 to 10%, step size: 1%
AuxiliaryChargingON (Utility Auxiliary Charging ON SOC)	30%	It takes effect after the "ChargeControlMode" is set as "SOC." User define: 20% to 50%, or 20% to (Utility charging off Soc minus 10%), step size: 1% Note: Take the minimum value between 50% and (Utility charging off Soc minus 10%).
AuxiliaryChargingOFF (Utility Auxiliary Charging OFF SOC)	60%	It takes effect after the "ChargeControlMode" is set as "SOC." User define: (Utility charging on Soc plus 10%) to 100%, or 40% to 100%, step size: 1% Note: Take the maximum value between (Utility charging on Soc plus 10%) and 40%.
SOC BAT Capacity (SOC Battery Capacity)	Not fixed, updated in real time	Read-only (After the BMS is connected, this value will read from the BMS)
LimitChgTemp (Limit Charge Temperature)	0.0℃	User define: -20℃ to 0℃, step size: 0.1℃ When the environment or the battery temperature is lower than this value, the inverter/charger will stop charging the battery.
LimitDisChgTem (Limit Discharge Temperature)	0.0℃	User define: -20℃ to 0℃, step size: 0.1℃ When the environment or the battery temperature is lower than this value, the inverter/charger will stop discharging.
OTP	50.0℃	User define: (Battery over-temperature protect

(Battery Over Temperature Protection)		recover plus 5℃) to 60℃, step size: 0.1℃
OTP Recovery (Battery Over Temperature Protection Recovery)	45.0℃	User define: 30℃ to (Battery over-temperature protect minus 5℃), step size: 0.1℃
Equalization Date (Equalization Charging Date)	28	User define: 1—28, step size: 1
Manual Equalize	OFF	User define: OFF, ON This parameter is for manual equalizing charging. When set to "ON", the inverter/charger enters this manual equalizing charging working mode. After the inverter/charger restarts, the default value is restored to "OFF," indicating that the inverter/charger is charged periodically according to the set equalization charging cycle.
SOC Calibration	--	Press the ENTER button to reset, the SOC will be automatically recalculated.
Reset Learned SOC	--	Press the ENTER button to reset the self study AH.

5. Basic Param Setup

Battery Connection (Battery Have or Not)	HAVE	User define: HAVE, NO, REV Note: When the parameter value is changed (i.e., the value is changed from "HAVE" to "NO", or from "NO" to "HAVE"), the AC output will be cut off for about 3s before resuming normal output.
Charging Mode	Utlty&solr	User define: Solar, SolarPrior (Solar priority), Utlty&solr (Utility & solar), UtltyPrior (Utility priority). Note: For detailed working modes, refer to Chapter 4.

 Discharging Mode	PV > BT > BP	User define: PV > BP > BT (namely, PV > Bypass > Battery), PV > BT > BP (namely, PV > Battery > Bypass), BP > PV > BT (namely, Bypass > PV > Battery). Note: For detailed working modes, refer to Chapter 4.
LiProtectEnbl (Lithium Battery Protection Enable)	DISABLE	User define: DISABLE, ENABLE Set this value as "ENABLE," the charge/ discharge low temperature limit function is effective.
PV Mode	ALL SINGLE	User define: ALL SINGLE, ALL MULTIPLE, When two PV arrays are independently input, the value shall be set to "ALL SINGLE." When two PV arrays are connected in parallel as a single input to the inverter/charger (the PV terminals need to be paralleled externally), the value needs to be set to "ALL MULTIPLE." The wiring diagram is as shown below:  Product with one PV input is "ALL SINGLE" by default (other PV modes are invalid).
Stand By Mode	Normal	User define: Normal, Standby When set as "Standby," the inverter/charger will enter standby mode and the AC output will be stopped. After modifying the parameter and restarting the inverter/charger, the parameter will be restored to the default value (the previous modified value will not be saved).
Equalization Charging	DISABLE	User define: DISABLE, ENABLE This parameter is for automatic equalizing charging. Set this value as "ENABLE," the inverter/charger performs the equalize charging automatically. After modifying the parameter and restarting the inverter/charger, the parameter will be restored to the default value (the previous

		modified value will not be saved).
LowConsumptionMode	ENABLE	User define: DISABLE, ENABLE When set as "ENABLE," the inverter/charger will enter the low power consumption mode when certain conditions are met, such as no PV and utility, and the battery voltage drops to the "Low voltage disconnect voltage." After modifying the parameter and restarting the inverter/charger, the parameter will be restored to the default value (the previous modified value will not be saved).
Calibration Mode	OFF	User define: OFF, ON Note: This option is reserved, which is invalid currently.
Factory Reset	--	Factory Set (After setting the "Stand By Mode" as "Standby," some settings can be restored to the factory state.) Note: For other parameters, only the last modified values will be saved and cannot be restored to the factory state. Please refer to the parameter description for details. After setting, restart the inverter/charger for the setting to take effect.
Clear Fault	--	Press the "ENTER" button to exit the current fault state and resume normal operation. Note: The historical fault records will not be cleared.
Load	OPEN	User define: CLOSE, OPEN Open or close the loads. This parameter and the load output switch are of the same control. To change the state of either one, the other will be changed too. After modifying the parameter and restarting the inverter/charger, the parameter will be restored to the default value (the previous modified value will not be saved).
PVDCInputSource	DISABLE	User define: DISABLE, ENABLE When using a DC power to replace the PV array for power supply testing, it is necessary to set the

		"PV DC Input Source" as "ENABLE." Otherwise, the inverter/charger cannot work properly. After modifying the parameter and restarting the inverter/charger, the parameter will be restored to the default value (the previous modified value will not be saved).
ResetEnergyStatistic (Reset Energy Statistics)	--	Press the ENTER button to clear all accumulated charge and discharge energy.
Dry Contact ON Volt (Dry Contact ON Voltage)	44.0V (48V system)	User define: 0 to (Dry contact OFF voltage minus $0.1 \times N$), step size: 0.1V. Note: N = Rated battery voltage/12.
	22.0V (24V system)	When the battery voltage is lower than this value, the dry contact is connected.
Dry Contact OFF Volt (Dry Contact OFF Voltage)	50.0V (48V system)	User define: (Dry contact ON voltage plus $0.1 \times N$) to Overvoltage disconnect voltage, step size: 0.1V. Note: N = Rated battery voltage/12.
	25.0 (24V system)	When the battery voltage is higher than this value, the dry contact is disconnected.
AC Input Mode	Utility	User define: Utility, Generator When the AC input is a generator, this parameter needs to be set to "Generator" to improve the charging capability. Note: If the AC input mode does not match the AC source of the actual input, the normal operation of the inverter/charger will be affected. After setting, restart the inverter/charger for the setting to take effect.
BATT Input Mode	Shared	User define: Independent or Shared This parameter takes effect when the inverter/chargers are connected in parallel. If each inverter/charger is connected to the same battery pack, this value needs to be set to "Shared" mode. If each inverter/charger is connected to a separate battery pack, this value needs to be set to "Independent" mode.
Arc Fault Circuit Interrupter	OFF	User define: OFF, ON

6. Sys Param Setup		
BackLightTime	30S	User define: 6S, 30S, 60S, Always
Buzzer Alarm	ON	User define: OFF, ON If set to "ON," the buzzer will sound when an error occurs and will keep silence when the error is cleared. If set to "OFF," the buzzer will not sound even if an error occurs.
LCD Backlight	ON	User define: OFF, ON Note: "BckLightOnOff" is superior to "BackLightTime."
BaudRate	115200	User define: 115200, 9600, 19200, 38400, 57600
COM ID	1	User define: 1 to 254, step size: 1
Log Data Interval	60Sec	User define: 1s to 3,600s, step size: 1s Note: When setting this value, press and hold the "UP/DOWN" button to increase/decrease the value by 100*step size, namely, 100s. Set the time interval of the historical data (only refer to the voltage, current and other data stored regularly, excluding the historical faults. These historical data can be exported by the Solar Guardian PC software or Website.)
Language	ENGLISH	User define: ENGLISH, CHINESE
Bluetooth	VALID	User define: INVALID, VALID.
Temperature Unit	℃	User define: ℃, °F
BMS Communication	INVALID	User define: INVALID, VALID Set this value as "VALID," the inverter/charger will communicate with the battery normally.
BMS Protocol	0	User define: 0 to 240, step size: 1 Note: Refer to the Lithium battery protocol file.
BMS Com Method (BMS Communication Method)	RS485	Read-only

Indicator	OPEN	User define: OPEN, CLOSE Turn on/off the PV/LOAD/GRID/RUN indicators.
BMS Voltage Control	DISABLE	User define: DISABLE, ENABLE Set this value as "ENABLE," the BMS internal control parameters will be automatically synchronized to the inverter/charger, and the inverter/charger will control the battery charging/discharging based on these parameters.
BMS Curr Control Way (BMS Current Control Method) (See Subsection 2.5.2 Battery work modes for details)	INVALID	User define: INVALID, BMS, VIRTUAL_BMS Set this value as "INVALID," the inverter/charger controls the charge and discharge according to the value set on the LCD. Set this value as "BMS," the inverter/charger controls the charge and discharge according to the read BMS value. Set this value as "VIRTUAL_BMS," the inverter/charger controls the charge and discharge according to the charge-discharge current value calculated by the MAP table, which is preset in the inverter/charger.
Log Data Reset	--	Press the ENTER button to clear the voltage, current and other data stored regularly, excluding the historical faults. Note: After pressing the ENTER button, the flashing LED light will become solid on or turn off, and then the inverter/charger will restart, indicating that the reset is complete.
BATT Discharge Kx (Battery Charge/Discharge Coefficient)	3C	User define: 1C, 3C This value can be obtained by viewing the battery label. It takes effect only when the "BMSCurrent Select" is set as "VIRTUAL_BMS." When this parameter is set to "3C," the inverter/charger controls the charge and discharge according to the minimum value between 3 x BAT Capacity and MaxCharginCurrent/ LimitDisChgCurrt (which are set on the LCD).
MAP TEMP Select (MAP Temperature Select)	Default	User define: Default (25℃), BMS_ET (BMS environment temperature), BMS_C_MaxT (BMS cell maximum temperature), BMS_C_MinT (BMS

		cell minimum temperature), RS485, DSP The MAP table calculates the charging and discharging current values based on the temperature and SOC value of the lithium battery. When the lithium battery has BMS function and supports temperature upload, set "MAP TEMP Select" as "BMS_ET, BMS_C_MaxT, or BMS_C_MinT" according to the uploaded temperature. The "BMS_ET, BMS_C_MaxT, and BMS_C_MinT" take effect only when the "BMSCurrent Select" is set as "VIRTUAL_BMS." When the lithium battery only has a protection board, set "MAP TEMP Select" as "RS485" (A smart remote temperature sensor is needed). Otherwise; select "default (25°C)." "DSP" means the inverter/charger's temperature by default.
--	--	--

ManualChageEnable (Manual Charge Enable)	ENABLE	User define: ENABLE, DISABLE Under the normal BMS communication, if the "ManualChageEnable" is set to "ENABLE," the lithium battery charging is allowed. If the "ManualChageEnable" is set to "DISABLE," the lithium battery charging is not allowed.
---	--------	---

7. Sys DataTime Setup (See Subsection 2.5.5)

8. Password Setup (See Subsection 2.5.6)

9. Bat Control Data Setup (This will take effect when setting the "BAT Set Mode" as "Smart.")

BAT Set Mode (Battery Set Mode)	Smart	Read-only
Level	48V (48V system)	Read-only
	24V (24V system)	
Battery Type	AGM	48V battery type: AGM, GEL, FLD, LFP15S, LFP16S, LNCM13S, LNCM14S
		24V battery type: AGM, GEL, FLD, LFP8S,

		LNCM6S, LNCM7S
Bulk Charging Volt (Bulk Charging Voltage)	57.6V (48V system)	Read-only Note: They are determined by the battery type and cannot be modified.
	28.8V (24V system)	
Float Charging Volt (Float Charging Voltage)	55.2V (48V system)	
	27.6V (24V system)	
LV Recovery Volt (Low Voltage Recovery Voltage)	50.4V (48V system)	
	25.2V (24V system)	
LV Disconnect Volt (Low Voltage Disconnect Voltage)	44.4V (48V system)	
	22.2V (24V system)	

10. Bat Control Data Setup (This will take effect when setting the "BAT Set Mode" as "Expert" first)

BAT Set Mode (Battery Set Mode)	Expert	Read-only
Level	48V (48V system)	Read-only
	24V (24V system)	
Battery Type	AGM	48V battery type: AGM, GEL, FLD, LFP15S, LFP16S, LNCM13S, LNCM14S
		24V battery type: AGM, GEL, FLD, LFP8S, LNCM6S, LNCM7S
OV Disconnect Volt	64.0V	User define: Charging limit voltage < Overvoltage

(Overvoltage Disconnect Voltage)	(48V system)	disconnect voltage $\leq 16 \times N$, step size: 0.1V Note: N = Rated battery voltage/12.
	32.0V (24V system)	
Charging Limit Volt (Charging Limit Voltage)	60.0V (48V system)	User define: Equalize charging voltage < Charging limit voltage < Overvoltage disconnect voltage, step size: 0.1V
	30.0V (24V system)	
OV Recovery Volt (Overvoltage Recovery Voltage)	60.0V (48V system)	User define: $42.8V \leq$ Overvoltage reconnect voltage < (Overvoltage disconnect voltage minus $0.1 \times N$), step size: 0.1V. Note: N = Rated battery voltage/12.
	30.0V (24V system)	User define: $21.4V \leq$ Overvoltage reconnect voltage < (Overvoltage disconnect voltage minus $0.1 \times N$), step size: 0.1V. Note: N = Rated battery voltage/12.
Equalization Volt (Equalization Charging Voltage)	58.4V (48V system)	User define: Boost charging voltage $\leq$ Equalize charging voltage $\leq$ Charging limit voltage, step size: 0.1V
	29.2V (24V system)	
Bulk Charging Volt (Bulk Charging Voltage)	57.6V (48V system)	User define: Float charging voltage $\leq$ Boost charging voltage $\leq$ Equalize charging voltage, step size: 0.1V
	28.8V (24V system)	
Float Charging Volt (Float Charging Voltage)	55.2V (48V system)	User define: Boost voltage reconnect voltage < Float charging voltage $\leq$ Boost charging voltage, step size: 0.1V
	27.6V (24V system)	
Bulk Recovery Volt (Bulk Recovery Voltage)	52.8V (48V system)	User define: Low voltage reconnect voltage < Boost voltage reconnect voltage < Float charging voltage, step size: 0.1V
	26.4V (24V system)	

LV Recovery Volt (Low Voltage Recovery Voltage)	50.4V (48V system)	User define: Low voltage disconnect voltage < Low voltage reconnect voltage < Boost voltage reconnect voltage, step size: 0.1V
	25.2V (24V system)	
UV AlarmRecoveryVolt (Undervoltage Alarm Recovery Voltage)	48.8V (48V system)	User define: (Undervoltage warning recover voltage plus $0.1 \times N$) < Undervoltage warning recover voltage $\leq$ Low voltage reconnect voltage, step size: 0.1V Note: N = Rated battery voltage/12.
	24.4V (24V system)	
UV Alarm Voltage (Undervoltage Alarm Voltage)	48.0V (48V system)	User define: $42.8V \leq$ Undervoltage warning voltage < (Undervoltage warning recover voltage minus $0.1 \times N$, step size: 0.1V. Note: N = Rated battery voltage/12.
	24.0V (24V system)	User define: 21.4V Undervoltage warning voltage < (Undervoltage warning recover voltage minus $0.1 \times N$, step size: 0.1V. Note: N = Rated battery voltage/12.
LV Disconnect Volt (Low Voltage Disconnect Voltage)	44.4V (48V system)	User define: Discharging limit voltage $\leq$ Low voltage disconnect voltage < Low voltage reconnect voltage, step size: 0.1V
	22.2V (24V system)	
Discharge Limit Volt (Discharging Limit Voltage)	42.4V (48V system)	Read-only
	21.2V (24V system)	

Note: Except for some parameters (such as "OutputFrequency, Phase Set, Return FactorySet, and AC Input mode" for the parallel connection etc.), the inverter/charger needs to be restarted to take effect. The rest of the parameters take effect immediately after modifying.

2.5.2 Battery work modes


The following table lists the recommended working mode and setting process for different application scenarios. According to your current battery status (such as whether it is a lithium-ion battery pack, whether it has BMS function, whether it has current control function at the end of

charge and discharge, etc.), you can reasonably set the parameters to ensure that the battery works in the optimal performance, so as to ensure the safe operation of the system for a long time.

No.	Scenario	Recommended Working Mode	Setting Process
1	Non-lithium battery pack	The inverter/charger controls charging and discharging based on the LCD settings.	See Figure 1 "Setting process for non-lithium battery pack"
2	1. Lithium battery pack with BMS and current control function at the end of charge and discharge 2. Normal communication	The inverter/charger controls charging and discharging based on the read BMS values.	See Figure 2 "Setting process for lithium battery pack with BMS and current control function"
3	1. Lithium battery pack with BMS, without current control function at the end of charge and discharge 2. Normal communication	The inverter/charger controls charging and discharging based on the pre-set MAP table.	See Figure 3 "Setting process for lithium battery pack with BMS, without current control function"
4	1. Lithium battery pack with protective board only (no BMS) 2. No communication (A smart remote temperature sensor is recommended in this scenario.)	The inverter/charger controls charging and discharging based on the pre-set MAP table.	See Figure 4 "Setting process for lithium battery pack with protective board only"

● **Figure 1 Setting process for non-lithium battery pack**


When the system adopts non-lithium battery packs (such as AGM, GEL, or FLD batteries), follow the flowchart below to set parameters correctly. Set "Battery Capacity, Battery TCC, Battery Type" correctly, and set "Charge&Discharge Mode" as "VOLI" or "SOC". Then, set the battery voltage control parameters or SOC control parameters. The inverter/charger will control charging and discharging based on the LCD settings.

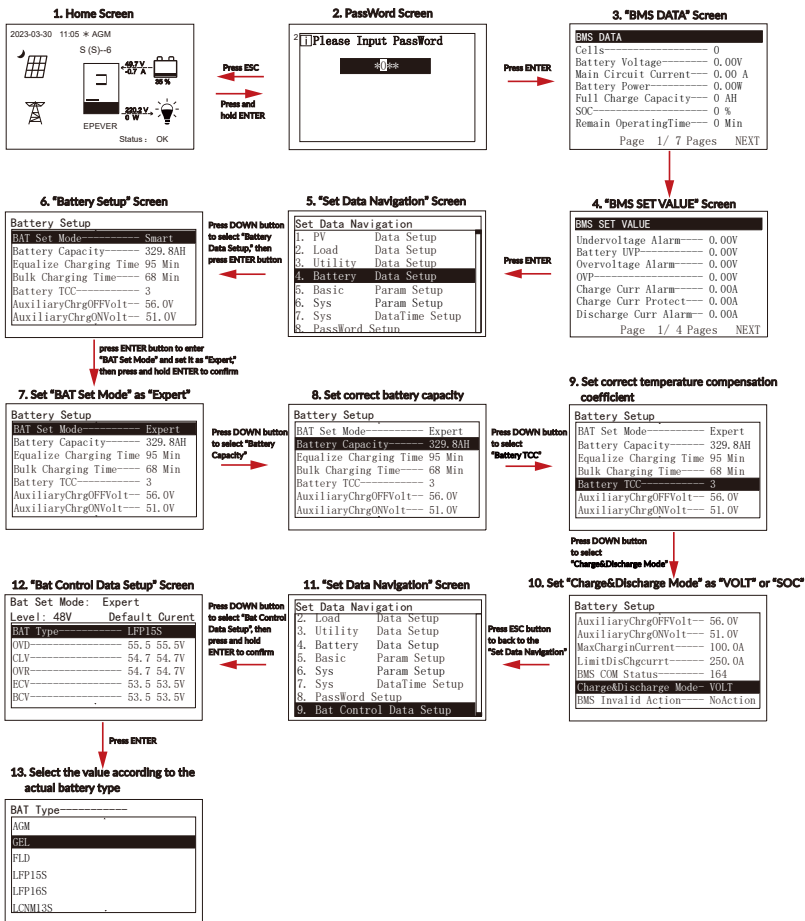

● Figure 2 Setting process for lithium battery pack with BMS and current control function

When the system adopts a lithium battery pack with BMS and current control function at the end of charge and discharge, and the lithium battery pack can communicate with the inverter/charger normally, follow the flowchart below to set parameters correctly. Set BMS protocol correctly, set "BMS Communication" as "VALID", set "BMS Voltage Control" as "ENABLE", set "BMS Curr Control Vlt" as "BMS", and set "Charge&Discharge Mode" as "VOLT" or "SOC". Then, set the battery

voltage control parameters or SOC control parameters. The inverter/charger controls charging and discharging based on the read BMS values.

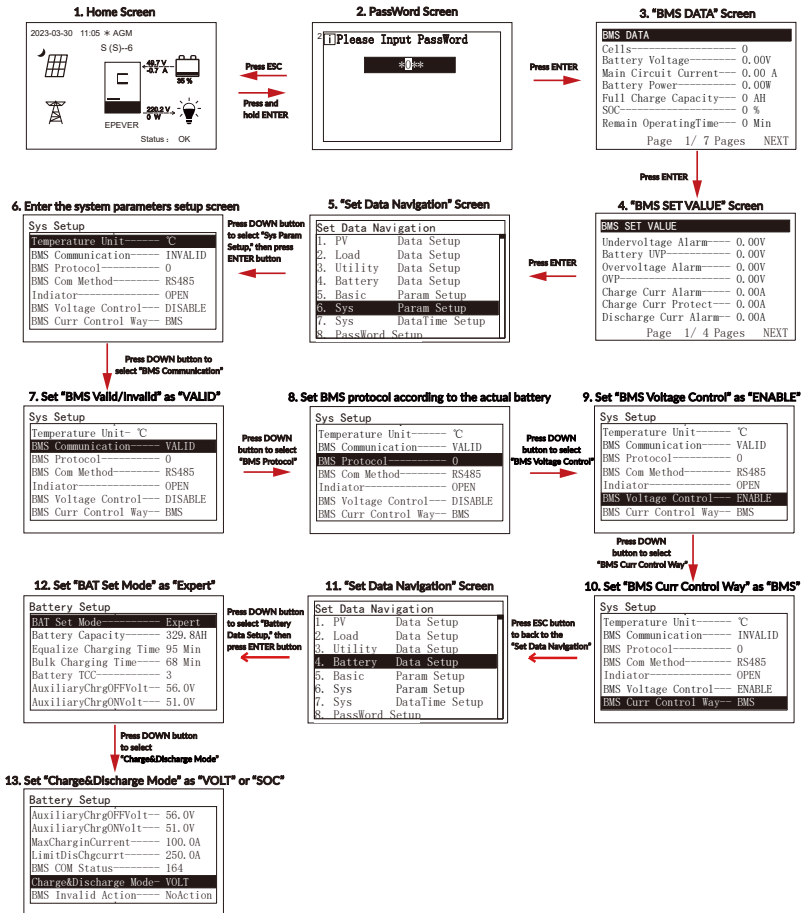

Tip

Please go to EPEVER official website to download the currently supported BMS manufacturers and the BMS parameters.

NOTICE

- The inverter/charger will control charging and discharging based on the LCD settings after setting the "BMS Curr Control Way" as "INVALID," or the communication between battery and inverter/charger fails.
- The inverter/charger controls charging and discharging based on the pre-set MAP table after setting the "BMS Curr Control Way" as "VIRTUAL_BMS".
- Due to the different charging and discharging characteristics and voltage consistency of lithium batteries from different manufacturers, it is necessary for professionals to guide the use of VIRTUAL_BMS for charging and discharging.

- **Figure 3 Setting process for lithium battery pack with BMS, without current control function**

When the system adopts a lithium battery pack with BMS, while without current control function at the end of charge and discharge, and the lithium battery pack can communicate with the inverter/charger normally, follow the flowchart below to set parameters correctly. Set BMS protocol and "BATT Discharge Kx" (viewing the battery label) correctly, set "BMS Communication" as "VALID," set "BMS Voltage Control" as "ENABLE," set "BMS Curr Control Way" as "VIRTUAL_BMS," set "MAP TEMP Select" as "BMS_ET," set "Battery Type" correctly, and set "Charge&Discharge Mode" as "VOLT" or "SOC". And then set the battery voltage control parameters or SOC control parameters. The inverter/charger controls charging and discharging based on the pre-set MAP table.

1. Home Screen

2023-03-30 11:05 * AGM

S (S)-6

30 %

EPEVER

Status: OK

2. PassWord Screen

Please Input PassWord

Press ESC

Press and hold ENTER

3. "BMS DATA" Screen

BMS DATA

Cells----- 0

Battery Voltage----- 0.00V

Main Circuit Current----- 0.00 A

Battery Power----- 0.00W

Full Charge Capacity----- 0 AH

SOC----- 0 %

Remain OperatingTime----- 0 Min

Page 1 / 7 Pages NEXT

6. Enter the system parameters setup screen

Sys Setup

Temperature Unit----- °C

BMS Communication----- INVALID

BMS Protocol----- 0

BMS Com Method----- RS485

Indicator----- OPEN

BMS Voltage Control----- DISABLE

BMS Curr Control Way----- BMS

Press DOWN button to select "Sys Param Setup," then press ENTER button

5. "Set Data Navigation" Screen

Set Data Navigation

1. PV Data Setup

2. Load Data Setup

3. Utility Data Setup

4. Battery Data Setup

5. Basic Param Setup

6. Sys Param Setup

7. Sys Datetime Setup

8. Password Setup

Press ENTER

4. "BMS SET VALUE" Screen

BMS SET VALUE

Undervoltage Alarm----- 0.00V

Battery UVP----- 0.00V

Overvoltage Alarm----- 0.00V

OVP----- 0.00V

Charge Curr Alarm----- 0.00A

Charge Curr Protect----- 0.00A

Discharge Curr Alarm----- 0.00A

Page 1 / 4 Pages NEXT

Press ENTER

7. Set "BMS Valid/Invalid" as "VALID"

Sys Setup

Temperature Unit----- °C

BMS Communication----- VALID

BMS Protocol----- 0

BMS Com Method----- RS485

Indicator----- OPEN

BMS Voltage Control----- DISABLE

BMS Curr Control Way----- BMS

Press DOWN button to select "BMS Communication"

8. Set BMS protocol according to the actual battery

Sys Setup

Temperature Unit----- °C

BMS Communication----- VALID

BMS Protocol----- 0

BMS Com Method----- RS485

Indicator----- OPEN

BMS Voltage Control----- DISABLE

BMS Curr Control Way----- BMS

Press DOWN button to select "BMS Protocol"

9. Set "BMS Voltage Control" as "ENABLE"

Sys Setup

Temperature Unit----- °C

BMS Communication----- VALID

BMS Protocol----- 0

BMS Com Method----- RS485

Indicator----- OPEN

BMS Voltage Control----- ENABLE

BMS Curr Control Way----- BMS

Press DOWN button to select "BMS Voltage Control"

Press DOWN button to select "BMS Curr Control Way"

12. Set "MAP TEMP Select" as "BMS_ET"

Sys Setup

BMS Com Method----- RS485

Indicator----- OPEN

BMS Voltage Control----- ENABLE

BMS Curr Control Way----- VIRTUAL_BMS

Log Data Reset

BATT Discharge Kx----- 3C

MAP TEMP Select----- BMS_ET

Press ESC button to back to the "Set Data Navigation"

11. Set "BATT Discharge Kx" according to the actual battery

Sys Setup

BMS Com Method----- RS485

Indicator----- OPEN

BMS Voltage Control----- ENABLE

BMS Curr Control Way----- VIRTUAL_BMS

Log Data Reset

BATT Discharge Kx----- 3C

MAP TEMP Select----- Default

Press DOWN button to select "MAP TEMP Select"

Press DOWN button to select "BATT Discharge Kx"

10. Set "BMS Curr Control Way" as "VIRTUAL_BMS"

Sys Setup

Temperature Unit----- °C

BMS Communication----- INVALID

BMS Protocol----- 0

BMS Com Method----- RS485

Indicator----- OPEN

BMS Voltage Control----- ENABLE

BMS Curr Control Way----- VIRTUAL_BMS

13. "Set Data Navigation" Screen

Set Data Navigation

1. PV Data Setup

2. Load Data Setup

3. Utility Data Setup

4. Battery Data Setup

5. Basic Param Setup

6. Sys Param Setup

7. Sys Datetime Setup

8. Password Setup

Press DOWN button to select "Battery Data Setup," then press ENTER button

14. Set "BAT Set Mode" as "Expert"

Battery Setup

BAT Set Mode----- Expert

Battery Capacity----- 329.8AH

Equalize Charging Time----- 95 Min

Bulk Charging Time----- 68 Min

Battery TCC----- 3

AuxiliaryChrgOFFVlt----- 56.0V

AuxiliaryChrgONVlt----- 51.0V

Press DOWN button to select "ChargeControlMode"

15. Set "Charge&Discharge Mode" as "VOLT" or "SOC"

Battery Setup

AuxiliaryChrgOFFVlt----- 56.0V

AuxiliaryChrgONVlt----- 51.0V

MaxChrgInCurrent----- 100.0A

LimitDisChrgcurr----- 250.0A

BMS COM Status----- 164

Charge&Discharge Mode----- VOLT

BMS Invalid Action----- NoAction

Press ESC button to back to the "Set Data Navigation"

18. Select the value according to the actual battery type

BAT Type-----

AGM

GEL

FLD

LFP15S

LFP16S

LCM13S

Press ENTER button to enter the battery type screen

17. "Bat Control Data Setup" Screen

Bat Set Mode: Expert

Level: 48V Default Current

BAT Type----- LFP15S

OVD----- 55.5 55.5V

CLV----- 54.7 54.7V

OVR----- 54.7 54.7V

ECV----- 53.5 53.5V

BCV----- 53.5 53.5V

Press DOWN button to select "Bat Control Data Setup," then press and hold ENTER to confirm

16. "Set Data Navigation" Screen

Set Data Navigation

2. Load Data Setup

3. Utility Data Setup

4. Battery Data Setup

5. Basic Param Setup

6. Sys Param Setup

7. Sys Datetime Setup

8. Password Setup

9. Bat Control Data Setup


NOTICE

- The inverter/charger will control charging and discharging based on the LCD settings after setting the "BMS Curr Control Way" as "INVALID".
- Due to the different charging and discharging characteristics and voltage consistency of lithium batteries from different manufacturers, it is necessary for professionals to guide the use of VIRTUAL_BMS for charging and discharging.
- The MAP table controlling the battery charge and discharge is only related to parameters of "BMS Curr Control Way, BATT Discharge Kx, Battery Type, and MAP TEMP Select".


• **Figure 4 Setting process for lithium battery pack with protective board only**

When the system adopts a lithium battery pack with protective board only, and the lithium battery pack cannot communicate with the inverter/charger normally (A smart remote temperature sensor is recommended in this scenario. Reserved function, this product is under development.), follow the flowchart below to set parameters correctly. Set "BATT Discharge Kx" (viewing the battery label) correctly, set "BMS Curr Control Way" as "VIRTUAL_BMS," set "MAP TEMP Select" as "RS485" (A smart remote temperature sensor is needed. Otherwise; select "default (25℃)."), set "Battery Type" correctly, and set "Charge&Discharge Mode" as "VOLT" or "SOC". And then set the battery voltage control parameters or SOC control parameters. The inverter/charger controls charging and discharging based on the pre-set MAP table.


1. Home Screen

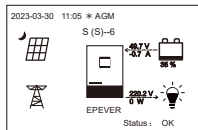


2. PassWord Screen

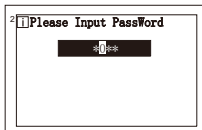


3. 'BMS DATA' Screen

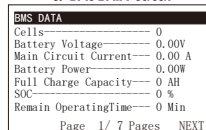


6. Enter the system parameters setup screen

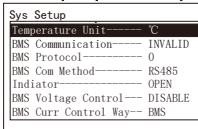


5. 'Set Data Navigation' Screen

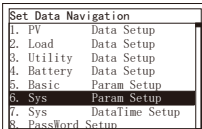


4. 'BMS SET VALUE' Screen

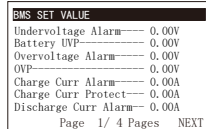


7. Set 'BMS Curr Control Way' as 'VIRTUAL_BMS'

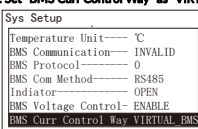


8. Set 'BATT Discharge Kc' according to the actual battery

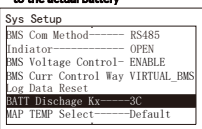


9. Set 'MAP TEMP Select' as 'RS485'

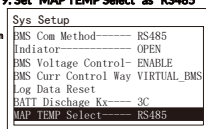


12. Set 'Charge&Discharge Mode' as 'VOLT' or 'SOC'

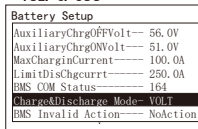


11. Set 'BAT Set Mode' as 'Expert'

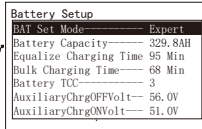


10. 'Set Data Navigation' Screen

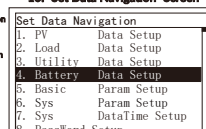


13. 'Set Data Navigation' Screen

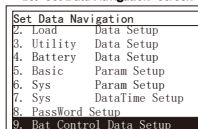

14. 'Bat Control Data Setup' Screen

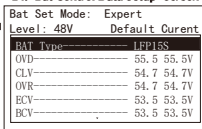

15. Select the value according to the actual battery type

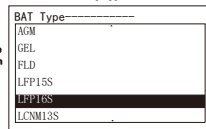

NOTICE

- The inverter/charger will control charging and discharging based on the LCD settings after setting the "BMS Curr Control Way" as "INVALID".
- Due to the different charging and discharging characteristics and voltage consistency of lithium batteries from different manufacturers, it is necessary for professionals to guide the

use of VIRTUAL_BMS for charging and discharging.

- The MAP table controlling the battery charge and discharge is only related to parameters of "BMS Curr Control Way, BATT Discharge Kx, Battery Type, and MAP TEMP Select".

2.5.3 Battery voltage control parameters (Smart)

After setting the "BAT Set Mode" as "Smart," the battery voltage control parameters are determined by the battery type and cannot be modified. To modify them, set the "BAT Set Mode" as "Expert" first.

2.5.4 Battery voltage control parameters (Expert)

After setting the "BAT Set Mode" as "Expert," all battery voltage control parameters can be modified.

1) Lead-acid battery voltage control parameters

The parameters are measured in the condition of 24V/25°C.

Battery Type Voltage control parameters	AGM	GEL	FLD	User define
Overvoltage Disconnect Voltage	32.0V	32.0V	32.0V	21.5—32V
Charging Limit Voltage	30.0V	30.0V	30.0V	21.5—32V
Overvoltage Reconnect Voltage	30.0V	30.0V	30.0V	21.5—32V
Equalization Charging Voltage	29.2V	--	29.6V	21.5—32V
Bulk Charging Voltage	28.8V	28.4V	29.2V	21.5—32V
Float Charging Voltage	27.6V	27.6V	27.6V	21.5—32V
Bulk Recovery Voltage	26.4V	26.4V	26.4V	21.5—32V
Low Voltage Recovery Voltage	25.2V	25.2V	25.2V	21.5—32V
Undervoltage Alarm Recovery Voltage	24.4V	24.4V	24.4V	21.5—32V
Undervoltage Alarm Voltage	24.0V	24.0V	24.0V	21.5—32V
Low Voltage Disconnect Voltage	22.2V	22.2V	22.2V	21.5—32V
Discharging Limit Voltage	21.2V	21.2V	21.2V	Read-only

The parameters are measured in the condition of 48V/25°C.

Battery Type Voltage control parameters	AGM	GEL	FLD	User define
Overvoltage Disconnect Voltage	64.0V	64.0V	64.0V	42.8—64V
Charging Limit Voltage	60.0V	60.0V	60.0V	42.8—64V
Overvoltage Recovery Voltage	60.0V	60.0V	60.0V	42.8—64V
Equalization Charging Voltage	58.4V	--	59.2V	42.8—64V
Bulk Charging Voltage	57.6V	56.8V	58.4V	42.8—64V
Float Charging Voltage	55.2V	55.2V	55.2V	42.8—64V
Bulk Recovery Voltage	52.8V	52.8V	52.8V	42.8—64V
Low Voltage Recovery Voltage	50.4V	50.4V	50.4V	42.8—64V
Undervoltage Alarm Recovery Voltage	48.8V	48.8V	48.8V	42.8—64V
Undervoltage Alarm Voltage	48.0V	48.0V	48.0V	42.8—64V
Low Voltage Disconnect Voltage	44.4	44.4V	44.4V	42.8—64V
Discharging Limit Voltage	42.4V	42.4V	42.4V	Read-only

The following rules must be obeyed when setting the Lead-acid battery parameters.

- A. Overvoltage Disconnect Voltage > Charging Limit Voltage ≥ Equalization Charging Voltage ≥ Bulk Charging Voltage ≥ Float Charging Voltage > Bulk Recovery Voltage
- B. Overvoltage Disconnect Voltage > Overvoltage Recovery Voltage
- C. Low Voltage Recovery Voltage > Low Voltage Disconnect Voltage ≥ Discharging Limit Voltage
- D. Undervoltage Alarm Recovery Voltage > Undervoltage Alarm Voltage ≥ Discharging Limit Voltage
- E. Bulk Recovery Voltage > Low Voltage Recovery Voltage

2) Lithium battery voltage control parameters

Battery Type Voltage control parameters	LFP	
	LFP8S	User define
Overvoltage Disconnect Voltage	29.6V	21.5—32V
Charging Limit Voltage	29.2V	21.5—32V
Overvoltage Recovery Voltage	29.2V	21.5—32V
Equalization Charging Voltage	28.5V	21.5—32V
Bulk Charging Voltage	28.5V	21.5—32V
Float Charging Voltage	27.2V	21.5—32V
Bulk Recovery Voltage	26.6V	21.5—32V
Low Voltage Recovery Voltage	26.0V	21.5—32V
Undervoltage Alarm Recovery Voltage	25.6V	21.5—32V
Undervoltage Alarm Voltage	24.8V	21.5—32V
Low Voltage Disconnect Voltage	23.2V	21.5—32V
Discharging Limit Voltage	22.0V	Read-only

Battery Type Voltage control parameters	LFP		
	LFP15S	LFP16S	User define
Overvoltage Disconnect Voltage	55.5V	59.2V	42.8—64V
Charging Limit Voltage	54.7V	58.4V	42.8—64V
Overvoltage Recovery Voltage	54.7V	58.4V	42.8—64V
Equalization Charging Voltage	53.5V	57.1V	42.8—64V
Bulk Charging Voltage	53.5V	57.1V	42.8—64V
Float Charging Voltage	51.0V	54.4V	42.8—64V
Bulk Recovery Voltage	49.9V	53.2V	42.8—64V
Low Voltage Recovery Voltage	48.7V	52.0V	42.8—64V

Undervoltage Alarm Recovery Voltage	48.0V	51.2V	42.8—64V
Undervoltage Alarm Voltage	46.5V	49.6V	42.8—64V
Low Voltage Disconnect Voltage	43.5V	46.4V	42.8—64V
Discharging Limit Voltage	41.2V	44.0V	Read-only

Battery Type Voltage control parameters	LNCM		
	LNCM6S	LNCM7S	User define
Overvoltage Disconnect Voltage	25.8V	30.1V	21.5—32V
Charging Limit Voltage	25.5V	29.8V	21.5—32V
Overvoltage Recovery Voltage	25.5V	29.8V	21.5—32V
Equalization Charging Voltage	24.8V	28.9V	21.5—32V
Bulk Charging Voltage	24.8V	28.9V	21.5—32V
Float Charging Voltage	24.0V	28.0V	21.5—32V
Bulk Recovery Voltage	23.5V	27.5V	21.5—32V
Low Voltage Recovery Voltage	22.2V	25.9V	21.5—32V
Undervoltage Alarm Recovery Voltage	21.6V	25.2V	21.5—32V
Undervoltage Alarm Voltage	21.0V	24.5V	21.5—32V
Low Voltage Disconnect Voltage	21.5V	22.4V	21.5—32V
Discharging Limit Voltage	18.6V	21.7V	Read-only

Battery Type Voltage control parameters	LNCM		
	LNCM13S	LNCM14S	User define
Overvoltage Disconnect Voltage	55.9V	60.2V	42.8—64V
Charging Limit Voltage	55.2V	59.5V	42.8—64V
Overvoltage Recovery Voltage	55.2V	59.5V	42.8—64V
Equalization Charging Voltage	53.8V	57.9V	42.8—64V

Bulk Charging Voltage	53.8V	57.9V	42.8—64V
Float Charging Voltage	52.0V	56.0V	42.8—64V
Bulk Recovery Voltage	51.0V	55.0V	42.8—64V
Low Voltage Recovery Voltage	48.1V	51.8V	42.8—64V
Undervoltage Alarm Recovery Voltage	46.8V	50.4V	42.8—64V
Undervoltage Alarm Voltage	45.5V	49.0V	42.8—64V
Low Voltage Disconnect Voltage	42.8V	44.8V	42.8—64V
Discharging Limit Voltage	40.3V	43.4V	Read-only

When setting the Lithium battery parameters, the following rules must be obeyed.

- A. Overvoltage Disconnect Voltage < Over Charging Protection Voltage (BMS Circuit Protection Modules) minus 0.2V
- B. Overvoltage Disconnect Voltage > Charging Limit Voltage $\geq$ Equalization Charging Voltage $\geq$ Bulk Charging Voltage $\geq$ Float Charging Voltage > Bulk Recovery Voltage
- C. Overvoltage Disconnect Voltage > Overvoltage Recovery Voltage
- D. Bulk Recovery Voltage > Low Voltage Recovery Voltage > Low Voltage Disconnect Voltage $\geq$ Discharging Limit Voltage
- E. Undervoltage Alarm Recovery Voltage > Undervoltage Alarm Voltage $\geq$ Discharging Limit Voltage
- F. Low Voltage Disconnect Voltage $\geq$ Over Discharging Protection Voltage (BMS Circuit Protection Modules) plus 0.2V

NOTICE

The BMS circuit protection module's voltage control accuracy must be at least $\pm 0.2V$. The [Overvoltage Disconnect Voltage] shall be lower than the protection voltage of the BMS circuit protection module. In contrast, the [Low Voltage Disconnect Voltage] shall be higher. The increased voltage of the [Overvoltage Disconnect Voltage] and the [Low Voltage Disconnect Voltage] is determined by the control accuracy of the BMS circuit protection module.

2.5.5 Time setting

Set Data Navigation	
1. PV	Data Setup
2. Load	Data Setup
3. Utility	Data Setup
4. Battery	Data Setup
5. Basic	Param Setup
6. Sys	Param Setup
7. Sys	DateTime Setup
8. PassWord	Setup

Enter the "Set Data Navigation" interface according to Subsection 2.4.3 Administrator interface. Then click the "UP/DOWN" button to select "7 Sys Data Time Setup", and click the "ENTER" button to enter the system time setting interface. On the system time setting interface, click the "ENTER" button to move right, click the "AC OUT" button to move left, and click the "UP/DOWN" button to adjust the value. After the time setting is completed, move the cursor back to the first digit and click the "ENTER" to confirm. The system time will be updated if the setting value complies with the range.

2.5.6 Password modifying

Set Data Navigation	
1. PV	Data Setup
2. Load	Data Setup
3. Utility	Data Setup
4. Battery	Data Setup
5. Basic	Param Setup
6. Sys	Param Setup
7. Sys	DateTime Setup
8. PassWord	Setup

Enter the "Set Data Navigation" interface according to Subsection 2.4.3 Administrator interface. Then click the "UP/DOWN" button to select "8 PassWord Setup", and click the "ENTER" button to enter the password modifying interface. Click the "ENTER" button to move right, click the "AC OUT" button to move left, and click the "UP/DOWN" button to adjust the value. After the password is modified, move the cursor back to the first digit and click the "ENTER" button to confirm.

Note: The default password is "0000", which is set to prevent non-professional operations. Please memorize the new password after modifying it. If forgetting the password, press and hold the "AC OUT" button on the password inputting page; the password will be automatically reset to "0000."

3 Single Installation

3.1 Attention

- Please read the manual carefully to familiarize yourself with the installation steps.
- Be very careful when installing the batteries, especially flooded lead-acid batteries. Please wear eye protection, and have fresh water available to rinse if contact with battery acid.
- Keep the battery away from any metal objects, which may cause a short circuit of the battery.
- Combustible and harmful gases may come out from the battery during charging. Ensure the ventilation condition is good.
- This inverter/charger is wall-mounted. Consider whether the wall's bearing capacity can meet the requirements.
- Ventilation is highly recommended if mounted in an enclosure. Never install the inverter/charger in a sealed enclosure with flooded batteries! Battery fumes from vented batteries will corrode and destroy the inverter/charger circuits.
- The inverter/charger can work with lead-acid and lithium batteries within its control scope.
- Ensure all switches and breakers are disconnected before wiring. You operate the inverter/charger after checking that all wiring is correct.
- Loose connections and corroded wires may produce high heat that can melt wire insulation, burn surrounding materials, or even cause a fire. Ensure tight connections, use cable clamps to secure cables, and prevent them from swaying in motion.
- Select the system connection cables according to the current density no greater than $5\text{A}/\text{mm}^2$.
- The inverter/charger is for indoor installation only. Do not install the inverter/charger in a harsh environment such as humid, salt spray, corrosion, greasy, flammable, explosive, or dust accumulative.
- After turning off the switch, high voltage still exists inside the inverter/charger. Do not open or touch the internal devices; wait ten minutes before conducting related operations.
- Although the DC input terminal has reverse polarity protection, which only take effect without PV and Utility connection; please do not operate it in error frequently.
- The inverter/charger has anti-reverse protection circuit at the PV input terminal.
- Utility input and AC output are high voltage. Please do not touch the wiring connection.
- When the fan is working, please do not touch it to avoid injury.

NOTICE

- The short-circuit current of the PV array must comply with the "PV Maximum Short-circuit Current" in Chapter 8 Technical Specifications. The reverse connection time should not exceed 5 minutes, avoiding frequent operations in fault.
- The PV array must first be connected to a 500VDC or above circuit breaker with arc extinguishing function, and then connected to the inverter/charger. If the PV is reversed, disconnect the external circuit breaker first, and then disconnect the PV array terminal (such as the MC4 terminal) or the PV input terminal of the inverter/charger. Otherwise, an electric arc will be generated, causing damage to the PV array or the inverter/charger.

3.2 Wire and circuit breaker size

The wiring and installation methods must conform to all national and local electrical code requirements.

➤ Recommended PV wire and breaker size

Since the PV output current varies with the PV module's size, connection method, or sunlight angle, the minimum wire size can be calculated by the PV I_{sc} (Max. short circuit current). Please refer to the I_{sc} value in the PV module's specifications. When the PV modules are connected in series, the total I_{sc} equals any PV module's I_{sc} . When the PV modules are connected in parallel, the total I_{sc} equals the sum of the PV module's I_{sc} . The PV array's I_{sc} must not exceed the maximum PV input current. For max. PV input current and max. PV wire size, please refer to the table below:

Model	PV Wire Size	Circuit Breaker
HP3522-AH1250P20BR HP3542-AH0650P20BR	4mm ² /11AWG	2P—20A (with arc extinguishing function)

When two PV arrays are connected independently, the wire and circuit breaker size of each PV array are as follows:

Model	PV Wire Size	Circuit Breaker
HP5542-AH1050P20BR	4mm ² /11AWG	2P—20A (with arc extinguishing function)

When two PV arrays are connected in parallel, the wire and circuit breaker size are as follows:

Model	PV Wire Size	Circuit Breaker
HP5542-AH1050P20BR	10mm ² /7AWG	2P—40A (with arc extinguishing function)

NOTICE

When the PV modules are connected in series, the total voltage must not exceed the max. PV open circuit voltage 440V (at 25°C).

➤ Recommended Utility wire size

Model	PV Wire Size	Circuit Breaker
HP3522-AH1250P20BR HP3542-AH0650P20BR	6mm ² /10AWG	2P–25A
HP5542-AH1050P20BR	10mm ² /7AWG	2P–40A

➤ Recommended battery wire and breaker size

Model	PV Wire Size	Circuit Breaker
HP3542-AH0650P20BR	20mm ² /4AWG	2P–125A
HP5542-AH1050P20BR HP3522-AH1250P20BR	35 mm ² /2AWG	2P–200A

NOTICE

The recommended battery breaker size is selected when the battery terminals are not connected to any additional inverter.

➤ Recommended load wire size

Model	PV Wire Size	Circuit Breaker
HP3522-AH1250P20BR HP3542-AH0650P20BR	6mm ² /10AWG	2P-25A
HP5542-AH1050P20BR	10mm ² /7AWG	2P-40A

NOTICE

- The wire size is only for reference. Suppose a long distance exists between the PV array, the inverter/charger, and the battery. In that case, larger wires shall be used to reduce the voltage drop and improve the system's performance.
- The above wire and circuit breaker sizes are for reference only; please choose a suitable


wire and circuit breaker according to the actual situation.

3.3 Mounting the inverter/charger


DANGER

- Risk of explosion! Never install the inverter/charger in a sealed enclose with flooded batteries!
- Do not install the inverter/charger in a confined area where the battery gas can accumulate.

Step 1: Determine the installation location and heat-dissipation space. The inverter/charger requires at least 30cm of clearance right and left, and 50cm of clearance above and below.

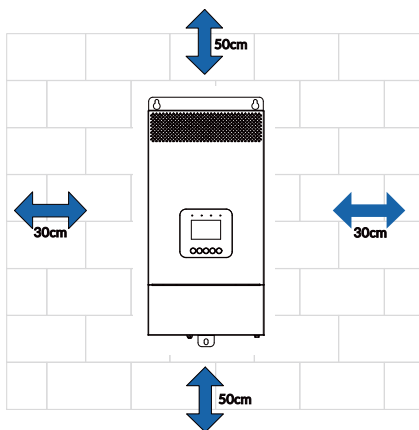

Step 2: According to the installation position marked with the mounting plate 1, drill two M10 holes with an electric drill.

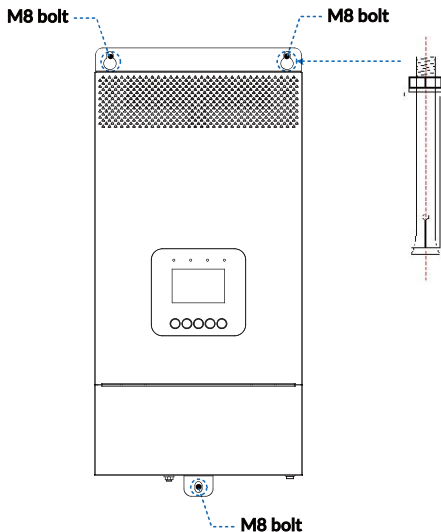

Step 3: Insert the screws of the M8 bolts and the steel pipes into the two M10 holes.

Step 4: Install the inverter/charger and determine the installation position of the M10 hole (located at the bottom of the inverter/charge).

Step 5: Remove the inverter/charger and drill an M10 hole according to the position determined in step 4.

Step 6: Insert the screw of the M8 bolt and the steel pipe into the M10 hole.


Step 7: Install the inverter/charger and secure the nuts with a sleeve.

3.4 Wiring the inverter/charger


Connect the inverter/charger in the order of ① Grounding > ② Battery > ③ Load > ④ PV array > ⑤ Utility or generator > ⑥ Optional accessories, and disconnect the inverter/charger in the reverse order.

The following wiring sequence is illustrated in the appearance of "HP5542-AH1050P20BR". For wiring positions of other models, please refer to the actual product appearance.

- No-battery mode

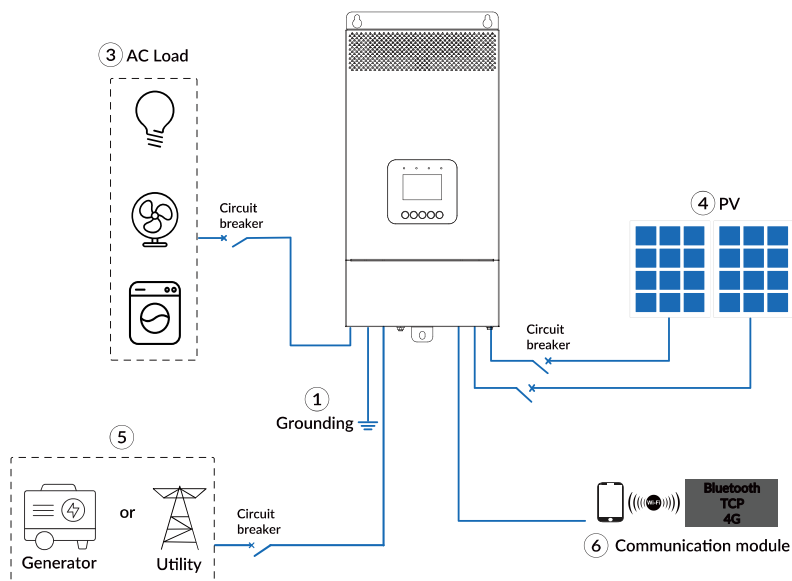

- Battery mode

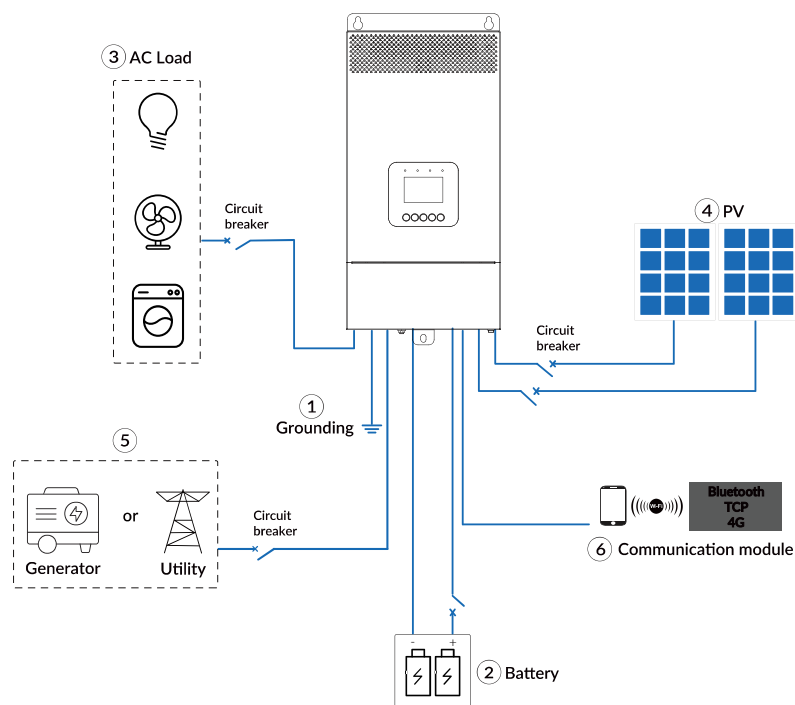


3.4.1 Grounding

The inverter/charger has a dedicated grounding terminal, which must be grounded reliably. The grounding wire size must be consistent with the recommended load wire size. The grounding connection point shall be as close as possible to the inverter/charger, and the total grounding wire shall be as short as possible.

❌ NO GROUNDING	❌ Do not connect the battery terminals to ground. ❌ Do not connect the PV terminals to ground. ❌ Do not ground the AC input L or N terminals between the inverter/charger and the household power distribution cabinet. ❌ Do not connect the AC output L or N terminals to ground.
-----------------------	---

☑ GROUNDING


- ☑ The cabinet case and the PE terminal of AC input and output must be firmly grounded through the earth rail.

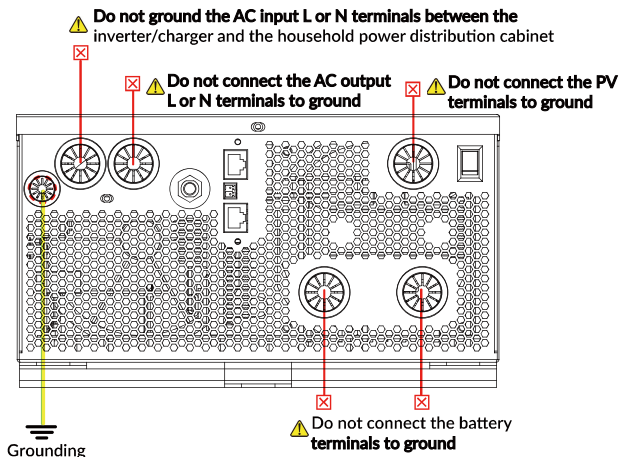

3.4.2 Connect the battery

NOTICE

- Please disconnect the circuit breaker before wiring and ensure that the leads of "+" and "-" poles are polarity correctly.
- A circuit breaker must be installed on the battery side. Please refer to Subsection [3.2 Wire and circuit breaker size](#) for selection.

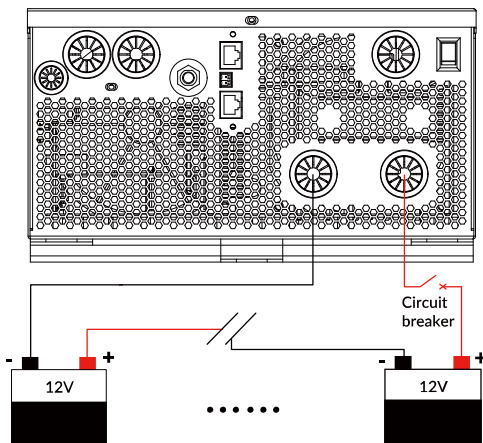

3.4.3 Connect the AC load




DANGER

High voltage! Electric shock hazard! When wiring the AC load, please disconnect the circuit breaker and ensure that the poles' leads are connected correctly.

NOTICE

- The AC loads shall be determined by the continuous output power of the inverter/charger. The AC load's surge power must be lower than the instantaneous surge power of the inverter/charger, or the inverter/charger will be damaged.
- If inductive loads such as motors, or a bidirectional transfer switch is connected to the AC output terminal, a separate overvoltage and overcurrent protector (VA-Protector) needs to be installed at the AC output terminal.

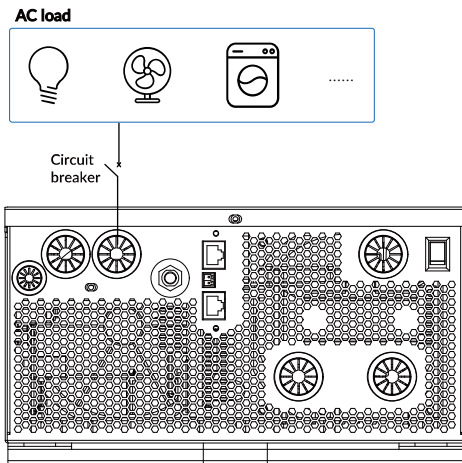

3.4.4 Connect the PV modules




DANGER

- High voltage! Electric shock hazard! The PV array can generate dangerous high-voltage! Disconnect the circuit breaker before wiring, and ensure that the leads of "+" and "-" poles are connected correctly.
- Suppose the inverter/charger is used in an area with frequent lightning strikes. In that case, install an external surge arrester at the PV input and utility input terminals is a must.

NOTICE

For optimal electromagnetic compatibility, please use the included magnetic ring provided with the inverter/charger. At a position close to the wiring hole of the cabinet, wind both the positive and negative PV terminals around the magnetic ring once simultaneously before connecting them to the internal wiring terminals.

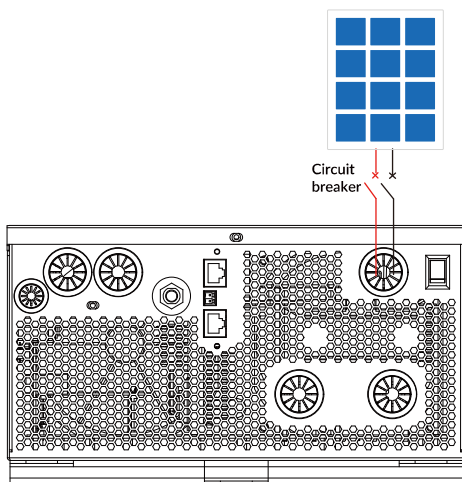


3.4.5 Connect the utility or generator

DANGER


- High voltage! Electric shock hazard! The utility input can generate very high voltage. Disconnect the circuit breaker or fast-acting fuse before wiring and ensure that the poles' leads are connected correctly.
- After the utility is connected, the PV and battery cannot be grounded. In contrast, the inverter/charger cover must be grounded reliably to shield the outside electromagnetic interference effectively and prevent the cover from causing electric shock to the human body.

NOTICE

There are various types of oil generators with complex output conditions. It is recommended to use the inverter oil generator. If non-inverter oil generators are used, they must be tested in practice before use.

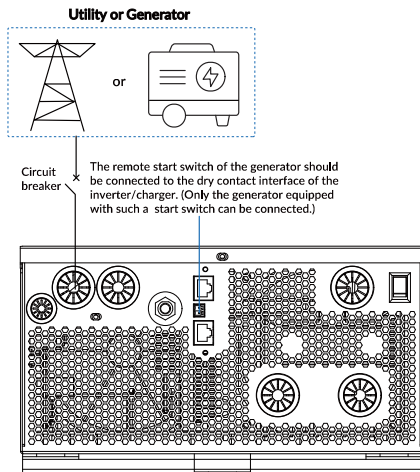


Dry contact interface: The dry contact interface can turn on/off the generator and is connected parallel with the generator's switch.

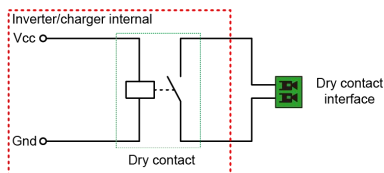

Working principle: When the battery voltage reaches the Dry Contact ON Voltage, the dry contact is connected. Its coil is energized. The dry contact can drive loads of no more than 125VAC /1A, 30VDC/1A. According to different battery types of the inverter charger, the default values of the Dry Contact ON Voltage and the Dry Contact OFF Voltage are different. Please refer to the Subsection [2.5.1 Parameters list](#) for details.

3.4.6 Connect the communication module

End-users can remote monitor the inverter/charger or modify parameters on the phone APP after connecting the WiFi module, TCP module, or 4G module to the RS485 interface on the inverter/charger. For detailed setting methods, please refer to the instructions on cloud APP, WiFi, TCP, or 4G communication modules in user manual.

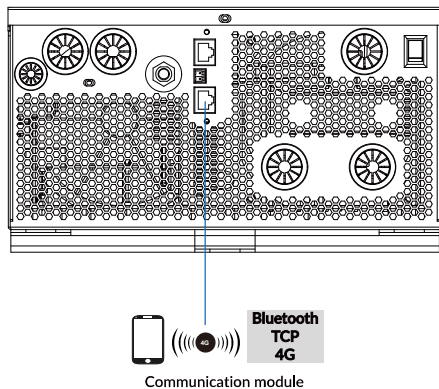


Note: For the specific communication modules supported, please refer to the accessories list file.

3.5 Operate the inverter/charger

Step 1: Double check whether the wire connection is correct.

Step 2: Connect the battery circuit breaker.

Step 3: Turn on the power switch. The LCD will be lit, which means the system running is normal.

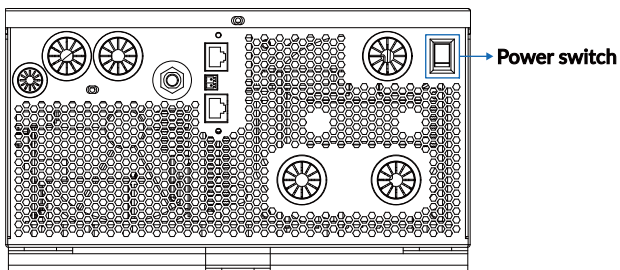

NOTICE

- Please connect the battery circuit breaker first. After the inverter/charger normally works, connect the PV array and utility circuit breakers later. Otherwise, we won't assume any responsibility for not following the operation.
- The AC output is ON by default after the inverter/charger is powered. Before turning on the power switch, ensure the AC output is connected to loads correctly, and no safety hazard exists.

Step 4: Set parameters by the buttons.

NOTICE

For detailed parameters setting, please refer to Section [2.5 Parameters setting](#). Please consult relevant technical personnel if you have any question before setting.

Step 5: Use the inverter/charger.

Connect the load circuit breaker, the PV array circuit breaker, and the utility circuit breaker in sequence. After the AC output is normal, turn on the AC loads one by one. Do not turn on all the loads simultaneously to avoid protection action due to a large transient impulse from the current. The inverter/charger will perform normal work according to the set working mode. See Section [2.4 Interface](#).

NOTICE

- When supplying power for different AC loads, turning on the load with a larger impulse current first is recommended. After the load output is stable, turn on the load with a smaller impulse current later.
- If the inverter/charger cannot work properly or the LCD/indicator shows an abnormality, please refer to Chapter [6 Troubleshooting](#) or contact our after-sales personnel.

4 Working Modes

4.1 Abbreviation

Abbreviation	Instruction
P _{PV}	PV power
P _{LOAD}	Load power
V _{BAT}	Battery voltage
LVD	Low Voltage Disconnect Voltage
LVR	Low Voltage Recovery Voltage
DP	Discharging Protection SOC
DPR	Discharging Protection Recovery SOC
AUX OFF	Auxiliary Charging OFF Voltage (namely, Utility Charging OFF Voltage)
AUX ON	Auxiliary Charging ON Voltage (namely, Utility Charging ON Voltage)
UAC OFF	Utility Auxiliary Charging OFF SOC
UAC ON	Utility Auxiliary Charging ON SOC
LBACC	Battery Maximum Charging Current
SOC	The battery charging state, which indicates the ratio of the current storage capacity dividing the maximum storage capacity.


4.2 Battery mode

4.2.1 Scenario A: Both PV and utility are not available.


(A) Regardless of the input and output sources, the working mode is as follows.

PV ☒

Utility ☒

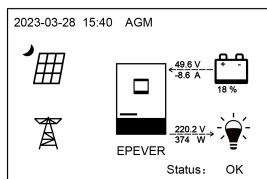

$$\begin{array}{l} V_{BAT} \geq LVR \\ /SOC \geq LER \end{array} \Bigg| \begin{array}{l} V_{BAT} \leq LVD \\ /SOC \leq LED \end{array}$$

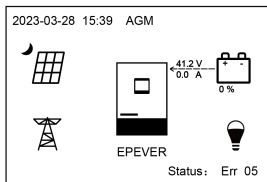

① When any of the following conditions is met, the battery supplies the load.

- The battery voltage is greater than or equal to the LVR value.
- The battery SOC is greater than or equal to the LER value.

② When any of the following conditions is met, the battery stops supplying the load.


- The battery voltage is less than or equal to the LVD value.
- The battery SOC is less than or equal to the LED value.

NOTICE

- Set the "Charge Control Mode" as "VOLT," the working mode is determined by the battery voltage value.
- Set the "Charge Control Mode" as "SOC," the working mode is determined by the battery SOC. The battery SOC value will be more accurate after a full charge-discharge cycle when the "Charge Control Mode" is set to "VOLT."
- For setting the "Charge Control Mode", refer to Subsection [2.5.1 Parameters list](#).


4.2.2 Scenario B: PV is available, but the utility is not available.

Regardless of the input and output sources, the working mode is as follows.

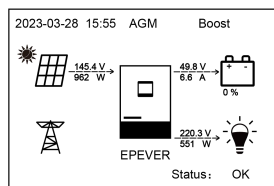

$$P_{PV} > P_{LOAD} \quad \parallel \quad P_{PV} \leq P_{LOAD}$$

① When the PV power is greater than the load power, the PV charges the battery and supplies extra power to the load.

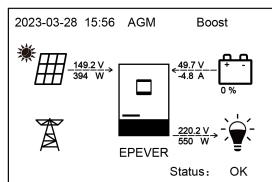

$$V_{BAT} \geq LVR \quad \parallel \quad V_{BAT} \leq LVD$$


$$/SOC \geq LER \quad \parallel \quad /SOC \leq LED$$

② When the PV power is lower than or equal to the load power, the PV will not charge the battery, and the battery will cut in to supply power to the load together with the PV.

(B)

PV ☒

Utility ☒

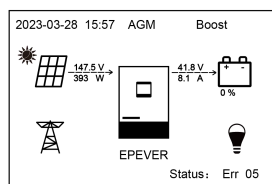

③ Any of the following is satisfied, the PV and the battery stop supplying power to the load. The PV charges the battery only.

- The battery voltage is lower than or equal to the LVD value.
- The battery SOC is lower than or equal to the LED value.

Note: When the battery voltage is greater than or equal to the LVR value, or the battery SOC is greater than or equal to the LER value, the working mode returns to state ②.

4.2.3 Scenario C: Both PV and Utility are available.


Charging Mode: Solar

Discharging Mode: PV > BP > BT or PV > BT > BP


(C-1)

PV ☒


Utility ☒

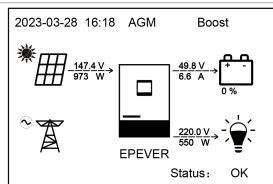

$$P_{PV} > P_{LOAD} \quad \updownarrow \quad P_{PV} \leq P_{LOAD}$$

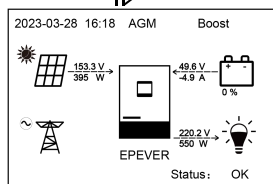

$$\begin{aligned} V_{BAT} \geq LVR & \quad \updownarrow \quad V_{BAT} \leq LVD \\ /SOC \geq LER & \quad \updownarrow \quad /SOC \leq LED \end{aligned}$$

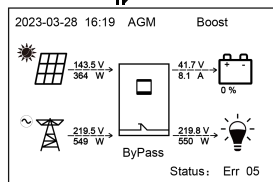

① When the PV power is greater than load power, the PV charges the battery and supplies extra power to the load.

② When the PV power is lower than or equal to the load power, the PV will not charge the battery, and the battery will cut in to supply power to the load together with the PV.

③ Any of the following is satisfied, the Utility supplies power to the load and the PV charges the battery.

- The battery voltage is lower than or equal to the LVD value.
- The battery SOC is lower than or equal to the LED value.

Note: When the battery voltage is greater than or equal to the LVR value, or the battery SOC is greater than or equal to the LER value, the working mode returns to state ②.


(C-2)

Charging Mode: Solar

Discharging Mode: BP > PV > BT

PV ☒


Utility ☒

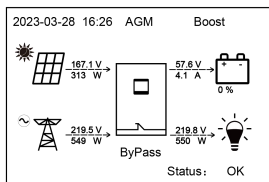

The Utility supplies power to the load, and the PV charges the battery.

Charging Mode: Solar prior

Discharging Mode: PV > BP > BT or PV > BT > BP

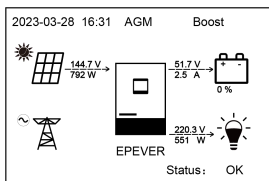


① When the PV power is greater than the load power, the PV charges the battery and supplies extra power to the load.

$$P_{PV} > P_{LOAD} \quad \parallel \quad P_{PV} \leq P_{LOAD}$$

(C-3)

PV ☒


Utility ☒

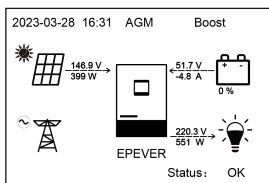

② When the PV power is lower than or equal to the load power, the PV will not charge the battery, and the battery will cut in to supply power to the load together with the PV.

$$V_{BAT} \geq AOF \quad \parallel \quad V_{BAT} \leq AON$$


$$/SOC \geq UCF \quad \parallel \quad /SOC \leq UCO$$

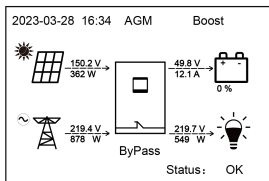


③ Any of the following is satisfied, the Utility supplies power to the load and charges the battery together with the PV.

- The battery voltage is lower than or equal to the AON value.
- The battery SOC is lower than or equal to the UCO value.


Note: When the battery voltage is greater than or equal to the AOF value, or the battery SOC is greater than or equal to the UCF value, the working mode returns to state ②.

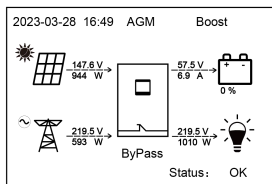(C-4) Charging Mode: Solar prior**Discharging Mode: BP > PV > BT****PV** ☒**Utility** ☒

$$P_{PV} > MCC \cdot V_{BAT} \quad \parallel \quad P_{PV} \leq MCC \cdot V_{BAT}$$

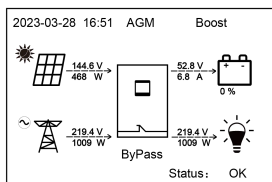

$$V_{BAT} \geq AOF \quad \parallel \quad V_{BAT} \leq AON$$
$$SOC \geq UCF \quad \parallel \quad SOC \leq UCO$$

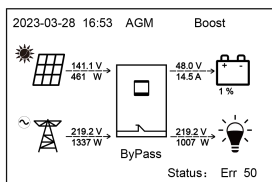

① When the PV power is greater than the ($MCC \cdot V_{BAT}$), the Utility and PV supply power to the load, and the PV charges the battery at the same time.

② When the PV power is lower than or equal to the ($MCC \cdot V_{BAT}$), the Utility supplies power to the load and the PV charges the battery.

③ Any of the following is satisfied, the Utility supplies power to the load and charges the battery together with the PV.


- The battery voltage is lower than or equal to the AON value.
- The battery SOC is lower than or equal to the UCO value.

Note: When the battery voltage is greater than or equal to the AOF value, or the battery SOC is greater than or equal to the UCF value, the working mode returns to state ②.

(C-5) Charging Mode: Solar plus Utility**Discharging Mode: Not relevant**


PV ☑

Utility ☑

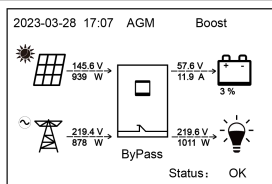

① When the PV power is greater than the $(MCC * V_{BAT})$, the Utility and PV supply power to the load, and the PV charges the battery simultaneously.

$$P_{PV} > MCC * V_{BAT} \quad \parallel \quad P_{PV} \leq MCC * V_{BAT}$$

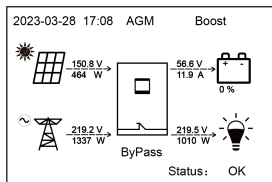

② When the PV power is lower than or equal to the $(MCC * V_{BAT})$, the Utility and PV charge the battery, and the Utility supplies power to the load.


Charging Mode: Utility prior

Discharging Mode: Not relevant

(C-6)

PV ☑

Utility ☑

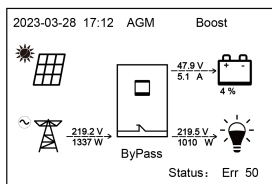

The Utility supplies power to the load and charges the battery simultaneously.

4.2.4 Scenario D: The PV is not available, but the Utility is available.


(D-1)

Charging Mode: Solar

Discharging Mode: PV > BT > BP

PV ☑


Utility ☑

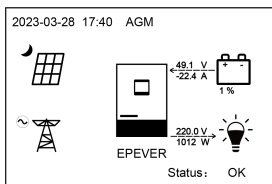

① Any of the following is satisfied, the battery supplies the load.

- The battery voltage is greater than or equal to the LVR value.
- The battery SOC is greater than or equal to the LER value.

$$\begin{matrix} V_{BAT} \geq LVR \\ /SOC \geq LER \end{matrix} \quad \parallel \quad \begin{matrix} V_{BAT} \leq LVD \\ /SOC \leq LED \end{matrix}$$

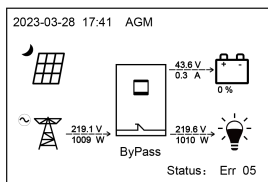

② Any of the following is satisfied, the Utility supplies power to the load.


- The battery voltage is lower than or equal to the LVD value.
- The battery SOC is lower than or equal to the LED value.

Charging Mode: Solar

(D-2)

PV ☒

Utility ☒

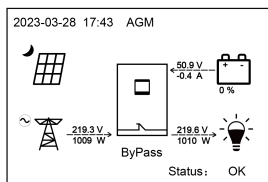

Discharging Mode: PV > BP > BT or BP > PV > BT


The Utility supplies power to the load.

(D-3)

Charging Mode: Solar prior

PV ☒

Utility ☒

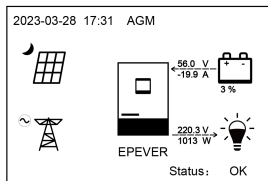


Discharging Mode: PV > BT > BP

① Any of the following is satisfied, the battery supplies the load.

- The battery voltage is higher than or equal to the AOF value.
- The battery SOC is greater than or equal to the UCF value.

$$\begin{array}{l} V_{BAT} \geq AOF \\ /SOC \geq UCF \end{array} \quad \parallel \quad \begin{array}{l} V_{BAT} \leq AON \\ /SOC \leq UCO \end{array}$$

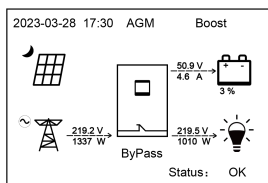

② Any of the following is satisfied, the Utility supplies power to the load and charges the battery simultaneously.


- The battery voltage is lower than or equal to the AON value.
- The battery SOC is lower than or equal to the UCO value.

Charging Mode: Solar prior

(D-4)

PV ☒

Utility ☒

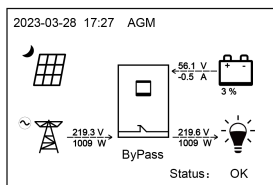


$$V_{BAT} \geq AOF \quad \parallel \quad V_{BAT} \leq AON$$

$$/SOC \geq UCF \quad \parallel \quad /SOC \leq UCO$$

Discharging Mode: PV > BP > BT or BP > PV > BT

① Any of the following is satisfied, the Utility supplies power to the load.

- The battery voltage is greater than or equal to the AOF value.
- The battery SOC is greater than or equal to the UCF value.

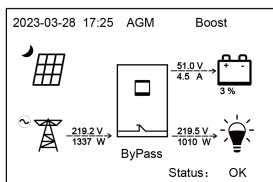

② Any of the following is satisfied, the Utility supplies power to the load and charges the battery simultaneously.


- The battery voltage is lower than or equal to the AON value.
- The battery SOC is lower than or equal to the UCO value.

Charging Mode: Solar plus Utility or Utility prior

(D-5)

PV ☒

Utility ☒

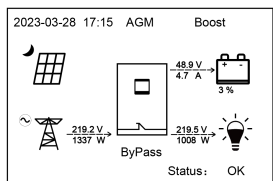

Discharging Mode: Not relevant


The Utility supplies power to the load and charges the battery simultaneously.

4.3 No-battery mode

Note: Under the no-battery mode, the "Charging Mode" and "Discharging Mode" settings will not take effect.

PV ☒


Utility ☒

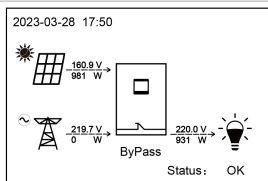

$$P_{PV} > P_{LOAD} \quad \parallel \quad P_{PV} \leq P_{LOAD}$$

① When the PV power is greater than the load power; the PV supplies power to the load.


Note: In this mode, the Utility still keep a minimum power input. When the PV power is lower than the load power, the Utility can replenish the power supply at any time to avoid device shutdown.

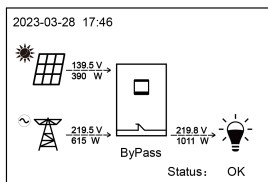

② When the PV power is lower than or equal to the load power, the PV and the Utility supply power to the load together.

PV ☒


Utility ☒

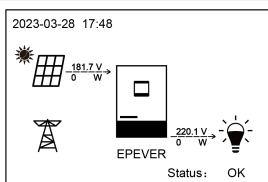

Only the PV supplies power to the load.

PV ☒

Utility ☒

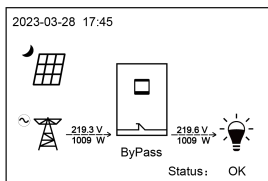

Only the Utility supplies power to the load.

5 Protections

No.	Protections	Instruction
1	PV limit current/power	When the PV array's actual charging current/power exceeds its rated current/power, it will charge the battery as per the rated current/power. When the PV voltage exceeds the bus voltage, the PV input power is constrained by the load power, charging power, the power that the solar panels can deliver, and the current of the PV circuit breaker.
2	PV short circuit	When the PV is not charging, a short circuit in the PV array will not damage the inverter/charger.
3	PV reverse polarity	In case of PV reverse polarity, the inverter/charger will not be damaged and will resume operation after correcting the wiring error.
4	AFCI Protection	● When a PV arc is detected, the arc is cut off within 2.5 seconds and the inverter output is turned off. After AFCI protection for 10 minutes, the inverter can automatically reset. After automatically resetting 5 times within 24 hours, the sixth reset requires manual reset. ● The AFCI function can be turned ON and OFF in the "Basic Parameter Setting" of the LCD, and the default is OFF.
5	Utility input overvoltage	When the utility voltage exceeds the set value of "Utility overvoltage disconnect voltage", the utility will stop charging and supplying the load.
6	Utility input undervoltage	When the utility voltage is lower than the set value of "Utility low voltage disconnect voltage", the utility will stop charging and supplying the load.
7	Battery reverse polarity	In case of battery reverse polarity, the inverter/charger will not be damaged and will resume operation after correcting the wiring error.
8	Battery overvoltage	When the battery voltage goes higher than the [Overvoltage Disconnect Voltage], the PV/Utility will stop charging the battery to protect the battery from being over-charged.
9	Battery overdischarge	When the battery voltage goes lower than the [Low Voltage Disconnect Voltage], the battery will automatically stop discharging to prevent over-discharging damage.

10	Load output short circuit	The output is turned off immediately in the occurrence of short-circuiting. And then, the output is recovered automatically after a delay time of 5s, 10s, and 15s separately (less than three times recovery within 5 minutes, it will be recounted). The inverter/charger stops working after the 4th protection and can resume working after resetting or restarting. Clear the fault in time because it may damage the inverter/charger permanently. Note: Resetting operation--See Subsection 2.4.3 <u>Administrator interface</u> to enter the "5. Basic Param Setup" screen, and then click the UP/DOWN button to locate the "Clear Fault" menu. Click the ENTER button to exit the current fault state and resume normal operation.			
11	Device overheating	When the internal temperature overheats, the inverter/charger will stop charging/discharging. The inverter/charger will resume charging/discharging when the internal temperature is normal and the protection time lasts more than 20 minutes.			
12	HP3522-AH1250 P20BR HP3542-AH0650 P20BR Inverter overload (no Utility)	$3,605W \leq P < 4,550W$	$4,550W \leq P < 5,250W$	$5,250W \leq P < 7,000W$	$P \geq 7,000W$
		Protect after 30s	Protect after 10s	Protect after 5s	Protect immediately
		Note: The output is recovered automatically after a delay time of 5s, 10s, and 15s separately. The inverter/charger stops working after the 4th protection and can resume working after resetting or restarting.			
13	HP3522-AH1250 P20BR HP3542-AH0650 P20BR Utility bypass overload (no-battery mode)	$3,850W \leq P < 4,795W$	$4,795W \leq P < 5,495W$	$5,495W \leq P < 7,000W$	$P \geq 7,000W$
		Protect after 30s	Protect after 10s	Protect after 5s	Protect immediately
		Note: The output is recovered automatically after a delay time of 5s, 10s, and 15s separately. The inverter/charger stops working after the 4th protection and can resume working after resetting or restarting.			
14	HP3522-AH1250 P20BR HP3542-AH0650 P20BR	$5,350W \leq P < 6,295W$	$6,295W \leq P < 6,995W$	$6,995W \leq P < 8,500W$	$P \geq 8,500W$
		Protect after 30s	Protect after 10s	Protect after 5s	Protect immediately

	Utility bypass overload (Battery mode)	Note: The output is recovered automatically after a delay time of 5s, 10s, and 15s separately. The inverter/charger stops working after the 4th protection and can resume working after resetting or restarting.		
15	HP5542-AH1050 P20BR Inverter overload (no Utility)	$5,665W \leq P < 6,600W$	$6,600W \leq P < 7,700W$	$P \geq 7,700W$
		Protect after 30s	Protect after 10s	Protect immediately
		Note: The output is recovered automatically after a delay time of 5s, 10s, and 15s separately. The inverter/charger stops working after the 4th protection and can resume working after resetting or restarting.		
16	HP5542-AH1050 P20BR Utility bypass overload (no-battery mode)	$6,050W \leq P < 6,985W$	$6,985W \leq P < 8,085W$	$P \geq 8,085W$
		Protect after 30s	Protect after 10s	Protect immediately
		Note: The output is recovered automatically after a delay time of 5s, 10s, and 15s separately. The inverter/charger stops working after the 4th protection and can resume working after resetting or restarting.		
17	HP5542-AH1050 P20BR Utility bypass overload (Battery mode)	$8,550W \leq P < 9,485W$	$9,485W \leq P < 10,585W$	$P \geq 10,585W$
		Protect after 30s	Protect after 10s	Protect immediately
		Note: The output is recovered automatically after a delay time of 5s, 10s, and 15s separately. The inverter/charger stops working after the 4th protection and can resume working after resetting or restarting.		

NOTICE

- The total short-circuit current of each PV array must be less than the "PV Maximum Short-circuit Current" (see Chapter 8 [Technical Specifications](#)), and the reverse connection time should not exceed 5 minutes. Frequent incorrect wiring is strictly prohibited as it may damage the inverter/charger.
- The PV input terminals must first be connected to a DC circuit breaker with an arc extinguishing function capable of handling 500VDC or higher, and then, connect the PV

input terminals to the inverter/charger. If the PV array is reversely connected, it is essential to first disconnect the external circuit breaker, followed by the PV standard terminals, or the PV connection terminals of the inverter/charger. Otherwise, it may result in arcing damage to the PV standard terminals or the inverter/charger.

- The inverter/charger will be damaged when the PV/Utility is correct connected and the battery is reversed connected.

6 Troubleshooting

NOTICE

After the inverter/charger is powered on, the meter displays the boot screen all the time (unable to enter the home screen) and the red "RUN" indicator flashes. It means the communication with the inverter/charger is error. When the above fault occurs, check whether the communication cable is disconnected. If not, please feel free to contact our after-sales engineer.

6.1 Battery faults

Error code ⁽¹⁾	Fault/Status	Indicator	Buzzer	Solution
Err4	Battery Overvoltage	--	--	Disconnect the utility and PV connection, and check whether the battery voltage is too high. Verify if the actual battery voltage matches the rated battery voltage; or check if the "Overvoltage Disconnect Voltage" is inconsistent with the battery specifications. After the battery voltage drops below the set value of "Overvoltage Recovery Voltage", the alarm will automatically be cleared.
Err5	Battery Undervoltage			Disconnect the loads connection, and check whether the battery voltage is too low. After the battery voltage is charged and restored to above the "Low Voltage Recovery Voltage", it will automatically return to normal, or use other methods to charge the battery.
Err11	Battery Over Temperature			Ensure the battery is installed in a cool and well-ventilated place, check that the battery actual charging and discharging current does not exceed the setting values of "Battery Maximum Charging Current " and "Battery Limit Discharging Current." It resumes normal work when the battery cools down to below the "Battery Over

				Temperature Protection Recovery."
Err37	Battery Overcurrent			Check that the battery actual charging and discharging current does not exceed the setting values of "Battery Maximum Charging Current " and "Battery Limit Discharging Current."
Err39	Battery Cable Disconnected			Check whether the battery connection is normal, and whether the BMS protection occurs.
Err50	Battery Undervoltage Alarm			Check if the battery voltage is lower than the "Undervoltage Alarm Voltage"
Err56	Battery Connection Failed			Check if the battery connection is normal and the BMS communication of the lithium battery is normal.

(1) The fault/status code is displayed in the "Status" column at the bottom right corner of the LCD. When multiple faults occur simultaneously, the LCD only displays the fault code with the smallest value.

6.2 PV faults

Error code ⁽¹⁾	Fault/Status	Indicator	Buzzer ⁽²⁾	Solution
Err15	PV1 Overvoltage	PV indicator solid red	Intermittent beeps	Check if the PV open-circuit voltage is too high (greater than 500 V). The alarm is released when the PV open-circuit voltage is below 490 V.
Err17	PV1 Overcurrent	PV indicator solid green	--	Turn off the inverter/charger first, wait for 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err18	PV2 Overvoltage	PV indicator solid red	Intermittent beeps	Check if the PV open-circuit voltage is too high (greater than 500 V). The alarm is released when the PV open-circuit voltage

				is below 490 V.
Err20	PV2 Overcurrent	PV indicator solid green	--	Turn off the inverter/charger first, wait for 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err30	PV HARD FAULT (PV Hardware Fault)			
Err43	PV1TSD (PV1 Temperature Sensor Disconnected)			
Err52	PV1 PCTO (PV1 Pre-charge Timeout)			
Err53	PV2 PCTO (PV2 Pre-charge Timeout)			
Err61	AFCI is not connected	--	--	When the AFCI is off, the Err61 fault code will not appear. When the AFCI function is turned on, Err61 is displayed. Please check whether the communication line of the AFCI module at the PV terminals is connected correctly. If it is still abnormal, please contact technical support.
Err62	AFCI has electric arc fault	--	--	When an AFCI fault is triggered, the inverter will shut down the output and automatically restart after 10 minutes. It can automatically restart 5 times every 24 hours. After 5 times, it will not restart. The user needs to check whether there is an arc problem in the PV line. After solving the problem, manually

				turn on the inverter to restart. If there is no arc problem in the PV line but the fault is reported multiple times, please temporarily turn off the AFCI function.
--	--	--	--	---

- (1) The fault/status code is displayed in the "Status" column at the bottom right corner of the LCD. When multiple faults occur simultaneously, the LCD only displays the fault code with the smallest value.
- (2) Set the "BuzzerAlert" as "ON", the buzzer will sound when a fault occurs. After the fault is eliminated, the buzzer will automatically mute. If the "BuzzerAlert" is set as "OFF", even if a fault occurs, the buzzer will not sound.

6.3 Inverter faults

Error code ⁽¹⁾	Fault/Status	Indicator	Buzzer ⁽²⁾	Solution
Err2	Inverter Output Overcurrent	LOAD indicator solid red	Intermittent beeps	Check if the load actual power exceeds the rated power (namely, the inverter/charger's continuous output power), disconnect the load completely and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err7	Inverter Output Overvoltage	LOAD indicator solid red	Intermittent beeps	Disconnect the load completely and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err10	Inverter Over Temperature	--	--	Ensure the inverter/charger is installed in a cool and well-ventilated place.
Err22	Inverter Hardware	--	--	Disconnect the load completely

	Overvoltage			and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err23	Inverter Hardware Overcurrent			
Err32	Inverter Voltage OFFSET Error			
Err35	Inverter Current OFFSET Error			
Err45	Inverter Temp Sensor Disconnected	LOAD indicator solid green	--	Turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err49	Inverter Output Undervoltage	LOAD indicator solid red	Intermittent beeps	Check if the load actual power exceeds the rated power (namely, the inverter/charger's continuous output power), disconnect the load completely and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err60	Boost Module Over Temperature	--	--	Ensure the inverter/charger is installed in a cool and well-ventilated place.

- (1) The fault/status code is displayed in the "Status" column at the bottom right corner of the LCD. When multiple faults occur simultaneously, the LCD only displays the fault code with the smallest value.
- (2) Set the "Buzzer Alarm" as "ON," the buzzer will sound when a fault occurs. After the fault is eliminated, the buzzer will automatically mute. If the "Buzzer Alarm" is set as "OFF," even if a fault occurs, the buzzer will not sound.

6.4 Utility faults

Error code ⁽¹⁾	Fault/Status	Indicator	Buzzer ⁽²⁾	Solution
Err8	Utility Overvoltage	GRID indicator solid red	Intermittent beeps	Check if the utility voltage exceeds the "Utility Overvoltage Disconnect Voltage," then disconnect the AC input and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err9	Utility Overcurrent	GRID indicator solid red	Intermittent beeps	Check if the load actual power exceeds the "Inverter Rated Power (see Chapter 8 Technical Specifications)," disconnect the load completely and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err25	Utility Undervoltage	GRID indicator solid red	--	Check if the utility voltage is lower than the "Utility Undervoltage Disconnect Voltage," disconnect the utility input and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err28	Utility Pre-charge Timeout	GRID indicator solid green	--	Check if the utility frequency is between the "Utility Under Frequency Disconnect Frequency" to "Utility Over Frequency Disconnect
Err29	Utility Relay Adhesion			

Err31	Utility Frequency Error	GRID indicator solid red	Intermittent beeps	Frequency," disconnect the utility input and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
-------	-------------------------	--------------------------	--------------------	--

- (1) The fault/status code is displayed at the "Status" column at the bottom right corner of the LCD. When multiple faults occur simultaneously, the LCD only displays the fault code with the smallest value.
- (2) Set the "Buzzer Alarm" as "ON," the buzzer will sound when a fault occurs. After the fault is eliminated, the buzzer will automatically mute. If the "Buzzer Alarm" is set as "OFF," even if a fault occurs, the buzzer will not sound.

6.5 Load faults

Error code ⁽¹⁾	Fault/Status	Indicator	Buzzer ⁽²⁾	Solution
Err33	Load Current OFFSET Error	--	--	Disconnect the load completely and turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err48	Load Over Load	LOAD indicator solid red	Intermittent beeps	
Err55	Overload Lockdown			

- (1) The fault/status code is displayed in the "Status" column at the bottom right corner of the LCD. When multiple faults occur simultaneously, the LCD only displays the fault code with the smallest value.
- (2) Set the "BuzzerAlert" as "ON," the buzzer will sound when a fault occurs. After the fault is eliminated, the buzzer will automatically mute. If the "BuzzerAlert" is set as "OFF," even if a fault occurs, the buzzer will not sound.

6.6 Other faults for single inverter/charger

Error code ⁽¹⁾	Fault/Status	Indicator	Buzzer	Solution
Err0	DC Bus Overvoltage	--	--	Turn off the inverter/charger. Wait 5 minutes and then turn on

Err6	DC Bus Undervoltage			the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err12	Ambient Over Temperature			Ensure the inverter/charger is installed in a cool and well-ventilated place.
Err21	Battery or Bus Hardware Overvoltage			
Err24	High Volt Bus Hardware Overcurrent			Turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err36	High Volt Bus Current Abnormal			
Err38	Boost Drive Error			
Err40	Auxiliary Power Supply Abnormal			
Err42	Environment Temp Sensor Disconnected			Turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.
Err46	Low Temperature Charging Limit			Check whether the ambient temperature is lower than the set "Charge low temperature limit" and "Discharge low temperature limit."
Err47	Low Temperature Discharging Limit			
Err54	EEPROM Abnormal			Turn off the inverter/charger. Wait 5 minutes and then turn on the inverter/charger to check if it resumes normal. If it is still abnormal, please contact our technical support.

(1) The fault/status code is displayed at the "Status" column at the bottom right corner of the LCD. When multiple faults occur simultaneously, the LCD only displays the fault code with the

smallest value.

6.7 BMS faults

Error code ⁽¹⁾	Fault/Status	Indicator	Buzzer	Solution
Err66	BMS Overvoltage	--	--	Check the BMS communication status or BMS setting parameters.
Err68	BMS Charging Temp Abnormal			
Err69	BMS Undervoltage			
Err71	BMS Discharging Temp Abnormal			
Err74	BMS Communication Failure			

(1) The fault/status code is displayed in the "Status" column at the bottom right corner of the LCD. When multiple faults occur simultaneously, the LCD only displays the fault code with the smallest value.

7 Maintenance

The following inspections and maintenance tasks are recommended every six months for best performance.

- Make sure the well ventilation and heat dissipation of the inverter/charger and clear up dirt and fragments on the fan.
- Check for damage to exposed wires caused by sun exposure, friction with surrounding objects, dry rot, or insect and rodent activity. Repair or replace damaged wires as necessary.
- Check and confirm that LED or LCD is consistent with the required. Pay attention to any troubleshooting or error indication. Take necessary corrective action.
- Check for signs of corrosion, insulation damage, high temperature or burning/discoloration on the terminal screws. Tighten terminal screws to the suggested torque.
- Check for dirt, nesting insects, and corrosion, and clean up in time as required.
- Check and confirm that the lightning arrester is in good condition. Replace a new one in time to avoid damaging the inverter/charger and other equipment.



DANGER

Electric shock hazard! Make sure that the power supply of the inverter/charger is disconnected when performing the above operations, and wait for 10 minutes for the power in the capacitor to be discharged before performing the corresponding checks or operations.

8 Technical Specifications

Model	HP3522-AH1250P20BR
Utility Input	
Utility Voltage	176VAC to 264VAC (Default) 90VAC to 280VAC (Configurable)
Utility Frequency	45Hz to 65Hz
Maximum Utility Charging Current	110A
Switch Response Time	Inverter to Utility: 10ms Utility to Inverter (when the load power is higher than 100W): 20ms
Inverter Output	
Rated Power (@30℃)	3,500W
3s Transient Surge Output Power	7,000W
Inverter Output Voltage	220/230VAC $\pm 3\%$
Inverter Frequency	50/60Hz $\pm 0.2\%$
Output Voltage Waveform	Pure sine wave
Load Power Factor	0.2—1 (VA $\leq$ Rated output power)
THDu	$\leq 3\%$ (24V resistive load)
Maximum Load Efficiency	91%
Maximum Inverter Efficiency	93%
Parallel Function	Yes, 12 units in standard, 16 units at most
Solar Controller	
PV Maximum Open-circuit Voltage	500V (At minimum operating environment temperature) 440V (At 25℃)

MPPT Voltage Range	85V to 400V
PV Maximum Input Power	4,000W
MPPT Input Channels	One way
PV Maximum Input Current	One way, 16A
PV Maximum Short-circuit Current	One way, 18A
PV Maximum Charging Current	120A
MPPT Maximum Efficiency	≥ 99.5%
Battery	
Rated Voltage	24VDC
Voltage Range	21.6VDC to 32.0VDC
Maximum Charging Current	120A
Mechanical Parameters	
Dimensions (L × W × H)	620mm × 288mm × 163mm
Mounting Size (L × W)	598mm × 245mm
Mounting Hole Size	Φ 9mm/Φ 10mm
Net Weight	14.2kg
Others	
No-load Losses	< 1.2 A
	Test condition: Utility, PV and Load are not connected, AC output is ON, fan stops, @24V input
Standby Current	< 0.9A
	Test condition: Utility, PV and Load are not connected, AC output is OFF, fan stops, @24V input

Operating Temperature	-20℃ to +50℃ (> 30℃ derating)	
Storage Temperature	-25℃ to +60℃	
Ingress Protection	IP20	
Relative Humidity	< 95% (N.C.)	
Altitude	< 4,000m (> 2,000 meters derating)	
Model	HP3542-AH0650P20BR	HP5542-AH1050P20BR
Utility Input		
Utility Voltage	176VAC to 264VAC (Default) 90VAC to 280VAC (Configurable)	
Utility Frequency	45Hz to 65Hz	
Maximum Utility Charging Current	60A	100A
Switch Response Time	Inverter to Utility: 10ms Utility to Inverter (when the load power is higher than 100W): 20ms	
Inverter Output		
Rated Power (@30℃)	3,500W	5,500W
3s Transient Surge Output Power	7,000W	8,500W
Inverter Output Voltage	220/230VAC ± 3%	
Inverter Frequency	50/60Hz ± 0.2%	
Output Voltage Waveform	Pure sine wave	
Load Power Factor	0.2—1 (VA ≤ Rated output power)	
THDu	≤ 3% (48V resistive load)	
Maximum Load Efficiency	92%	92%
Maximum Inverter Efficiency	94%	94%




Parallel Function	Yes, 12 units in standard, 16 units at most	
Solar Controller		
PV Maximum Open-circuit Voltage	500V (At minimum operating environment temperature) 440V (At 25℃)	
MPPT Voltage Range	85V to 400V	
PV Maximum Input Power	4,000W	6,000W
MPPT Input Channels	One way	Two ways
PV Maximum Input Current	One way, 13A	Two ways, 2 x 15A
PV Maximum Short-circuit Current	One way, 15A	Two ways, 2 x 18A
PV Maximum Charging Current	60A	100A
MPPT Maximum Efficiency	≥ 99.5%	
Battery		
Rated Voltage	48VDC	
Voltage Range	43.2VDC to 60.0VDC	
Maximum Charging Current	60A	100A
Mechanical Parameters		
Dimensions (L × W × H)	564mm × 288mm × 163mm	620mm × 288mm × 163mm
Mounting Size (L × W)	542mm x 245mm	598mm x 245mm
Mounting Hole Size	Φ 9mm/Φ 10mm	Φ 9mm/Φ 10mm
Net Weight	12.2kg	15.0kg
Others		
No-load Losses	< 0.8A	< 1.1 A
	Test condition: Utility, PV and Load are not connected, AC output	

	is ON, fan stops, @48V input	
Standby Current	< 0.6A	< 0.75A
	Test condition: Utility, PV and Load are not connected, AC output is OFF, fan stops, @48V input	
Operating Temperature	-20°C to +50°C (> 30°C derating)	
Storage Temperature	-25°C to +60°C	
Ingress Protection	IP20	
Relative Humidity	< 95% (N.C.)	
Altitude	< 4,000m (> 2,000 meters derating)	

9 Dimensions




- Model: HP3522-AH1250P20BR

(Unit: mm)

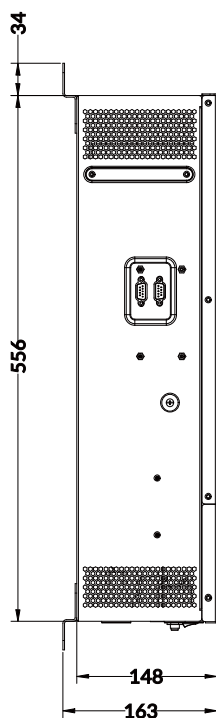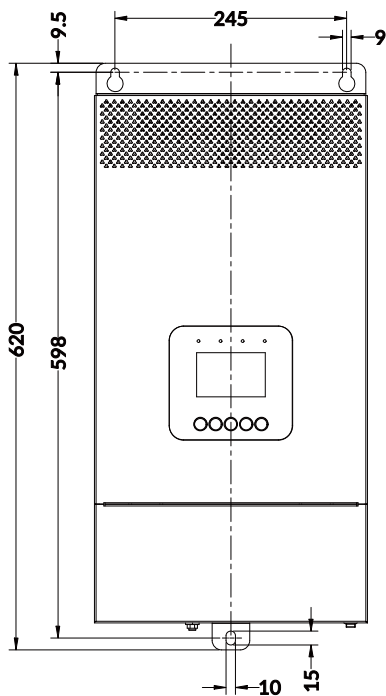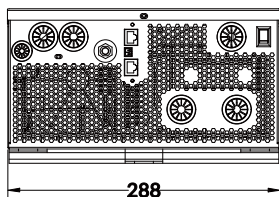


- Model: HP3542-AH0650P20BR

(Unit: mm)

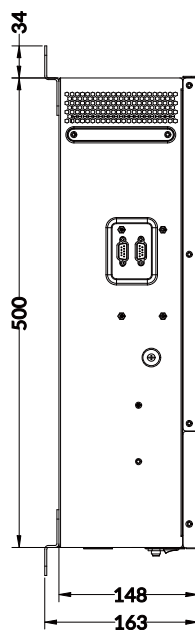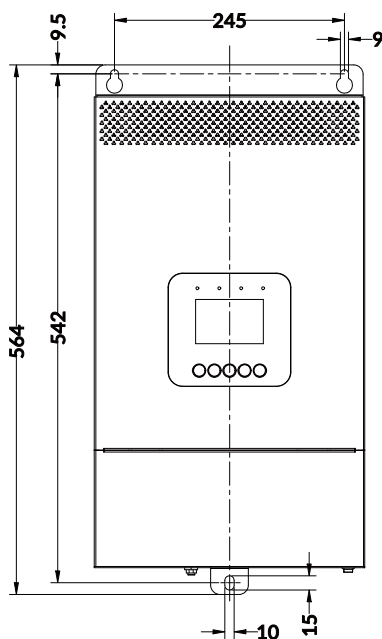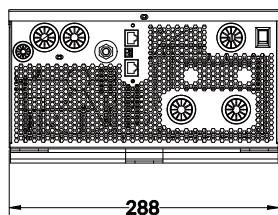

- Model: HP5542-AH1050P20BR

(Unit: mm)

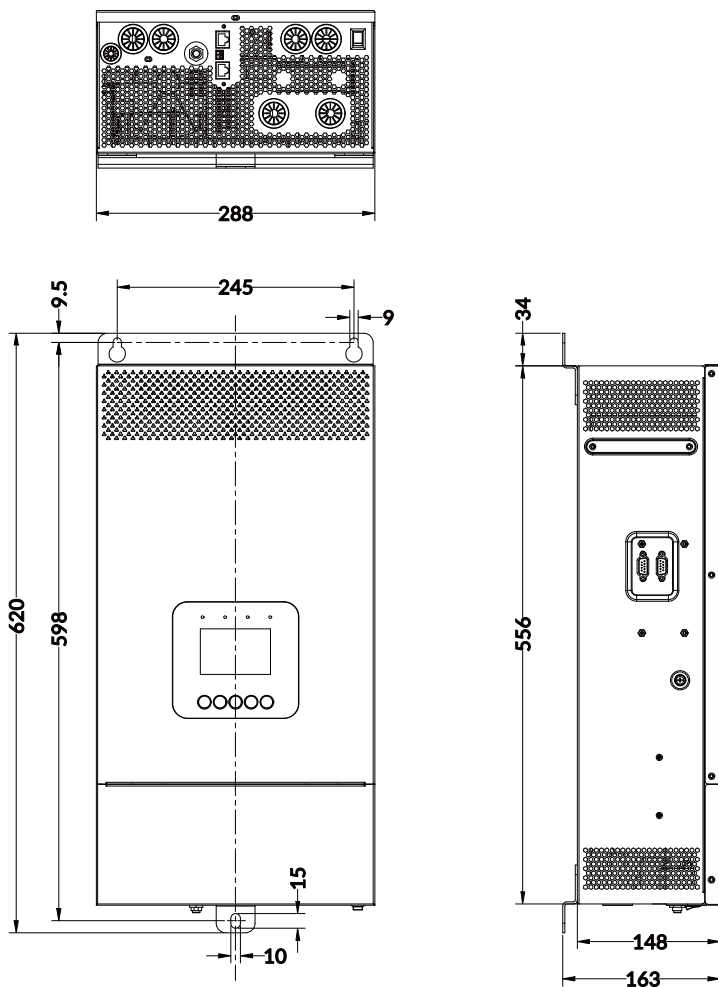

Any changes without prior notice! Version number: V1.0



HUIZHOU EPEVER TECHNOLOGY CO., LTD.

+86 - 752-3889706

info@epever.com

www.epever.com